
Frank Olsen

INTELLIGENT LAMP TABLE

Clean only with a non abrasive cloth or glass cleaner.

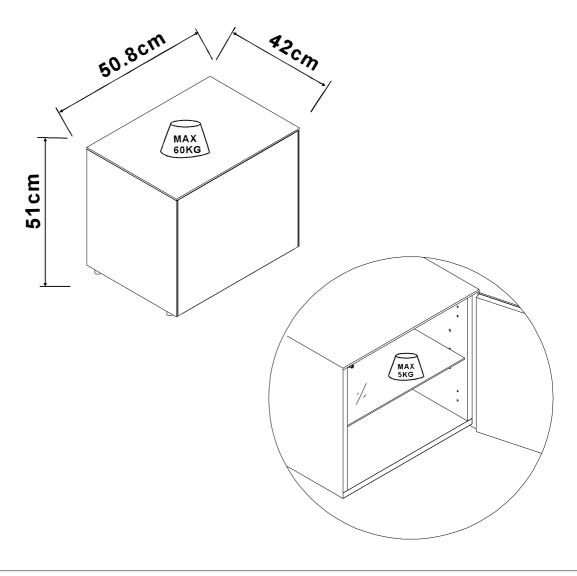











Structure Diagram

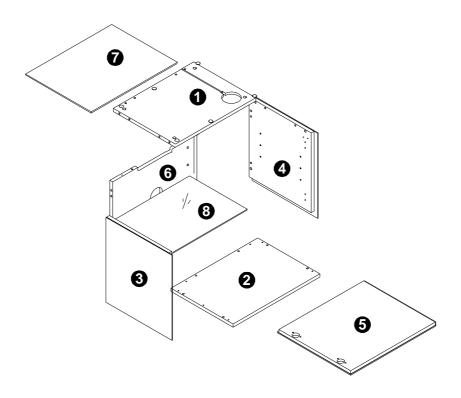


Hardware List					
A(8PCS)	B(8PCS)	C(16PCS)	D(8PCS)	E(1PC)	F(8PCS)
	×				
Ø6X32mm	Ø15 mm	M8X30mm	M8X30mm		Ø20mm
G(10PCS)	H(2PCS)	I(5PCS)	J(2PCS)	K(4PCS)	L(4PCS)
	<i>∢шшш</i> (⊕				
M4X40mm	M3.5X16mm				
M(1PCS)	N(4PCS)	O(1PC)	P(1PC)	R(1PC)	
2/0					


(1) Note: Turn the end of barrel for extra adjustment if needed to work the 'push open' mechanism.

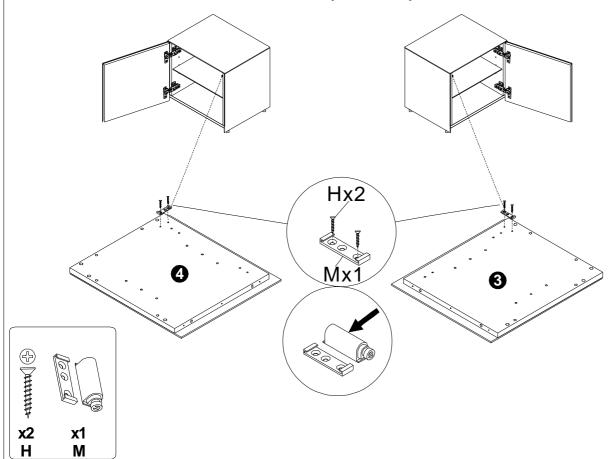


(2)

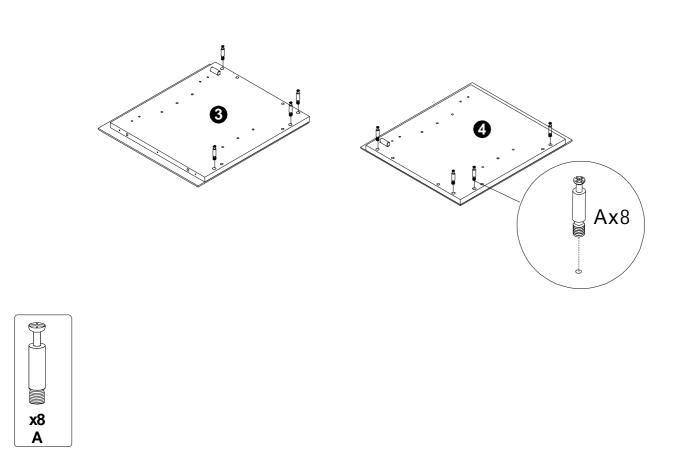


 
(3)

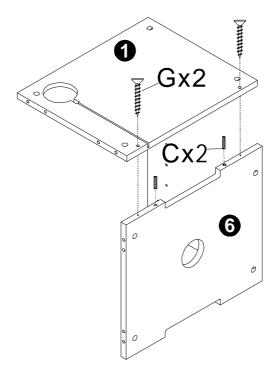




 
(4)

 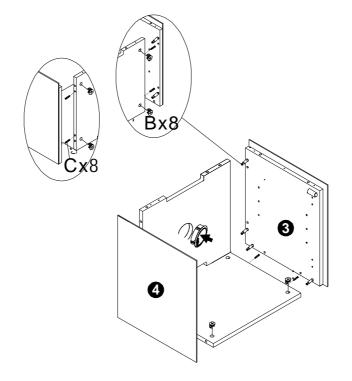


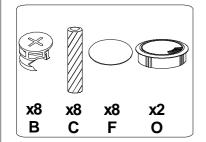







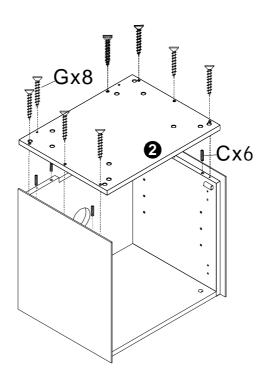





(6)

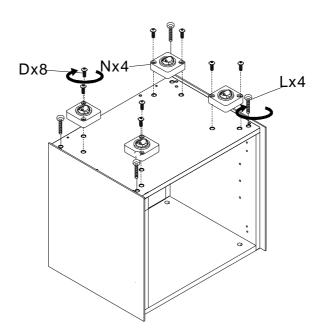


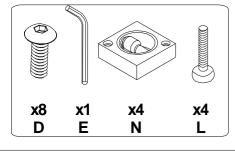

 
Adjustable height feet are optional to use. Recommended if floor is uneven.

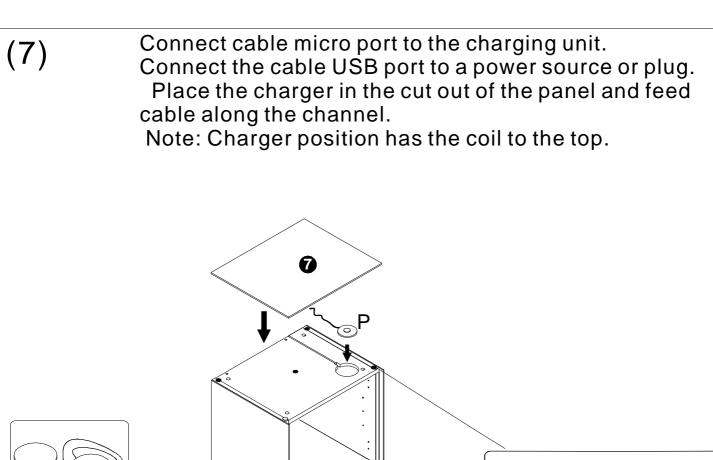


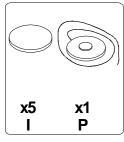




 (8)

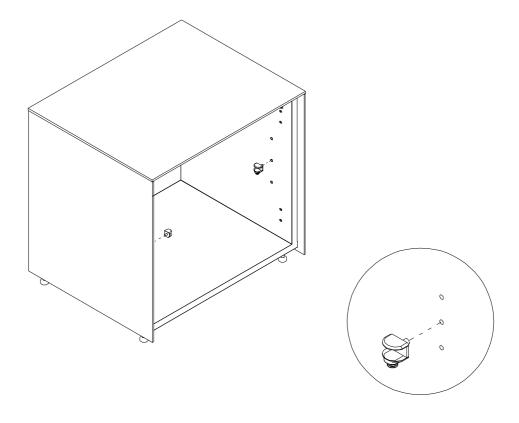





(9)

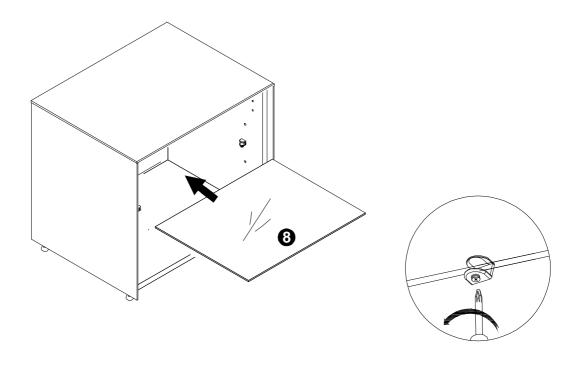


 
(10)

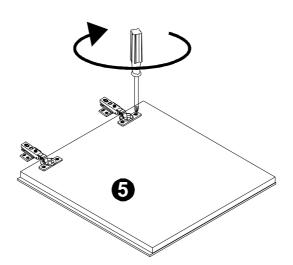





(11)

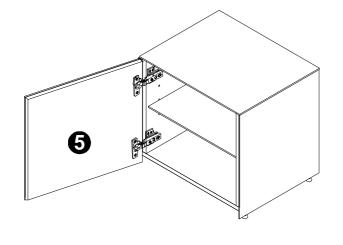

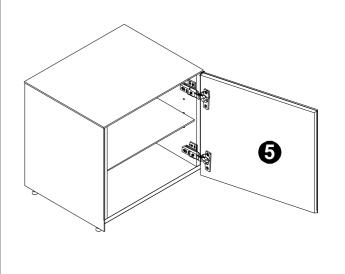

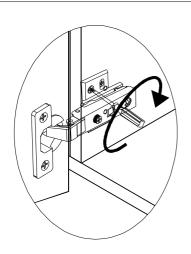

Hinges Adjusment Facilities

 

- A.Lateral Adjustment
- B. Verticl adjustment
- C.Front-to-Back

by screw adjusting via slot in the mounting plate by the slackening the hinge-arm mounting screw