
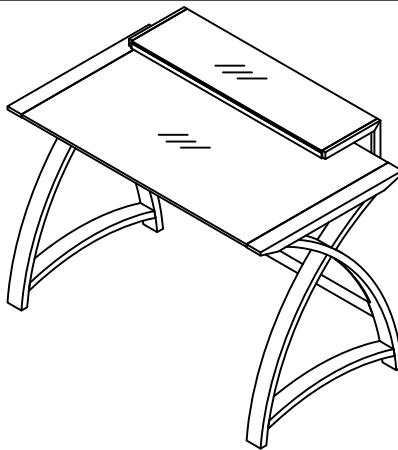







 

 







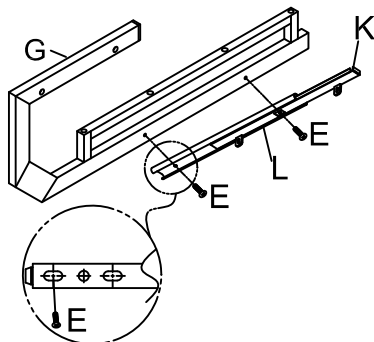
# ASSEMBLY INSTRUCTION

## PC 201

HELP LINE NUMBER 01443 816982


A		M4	1PC				
B		1/4"*90mmL	4PCS				
C		1/4"*25mmL	8PCS				
D		#4*12mmL	4PCS				
E		M4*10mmL	4PCS				
F		Top metal frame	1PC				
G		Left metal tube	1PC				
H		Right metal tube	1PC				
I		Keyboard	1PC	M		Rubber Pad	6PC
J		Top glass	1PC	N		Ø15*5mm	4PCS
K		Left metal slide	2PC	O		Brown end caps	8PCS
L		Right metal slide	1PC	P		#4*15mmL	11PCS

### STEP1




Fit runners to metal brackets using bolt "E", start by sliding the runner until it is fully extended then proceed to secure rear of runner first, making sure you use the hole furthest back, Then close the runner and secure the front using the hole that is now aligned


### STEP2

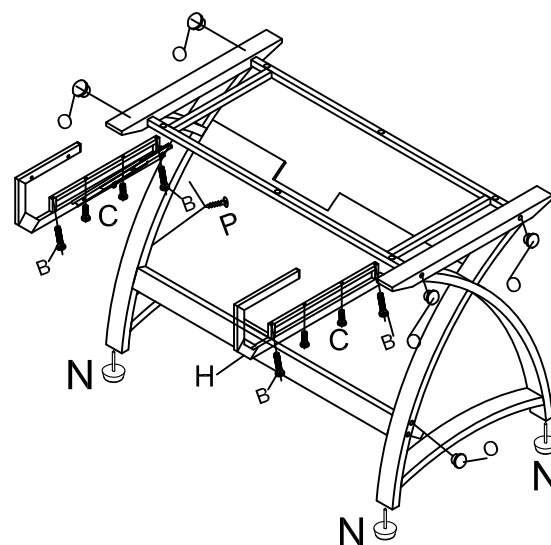

### STEP3

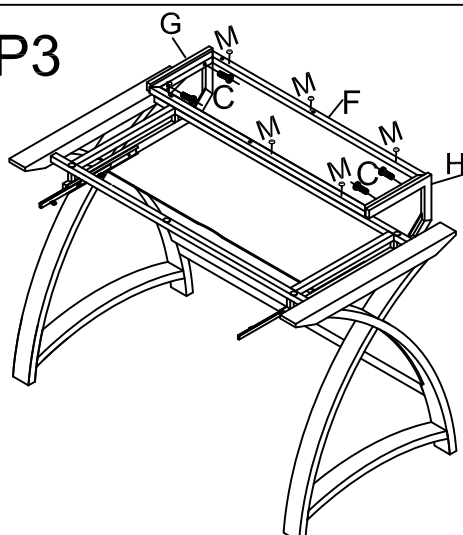

### STEP4

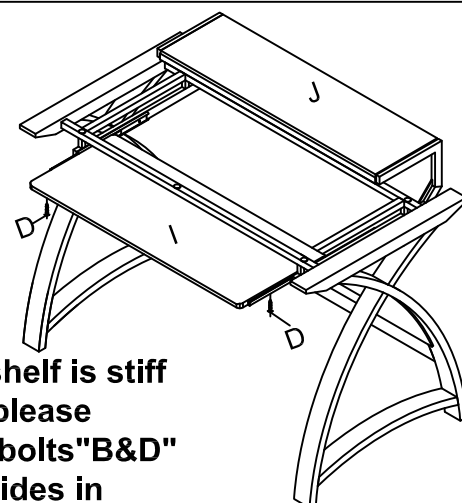

If the keyboard shelf is stiff to operate, then please slightly slacken bolts "B&D" on one or both sides in step2 until it moves freely.