
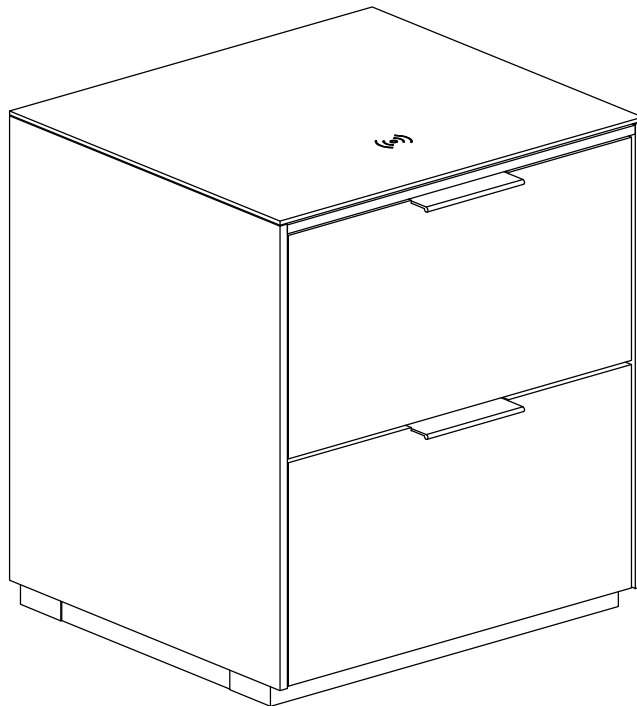

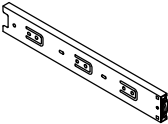








Intel Bedside Wireless Charging


Assembly Instructions

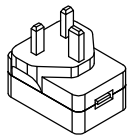

HARDWARE


A  x20	B  x20	C  x12	D  x8	E  x8	F  x4
G  x4	H  x2	I  x16	J  x4	K  x14	L  x14
M  x4	N  x2	O  x1	P  x4	Q  x1	R  x1

PARTS

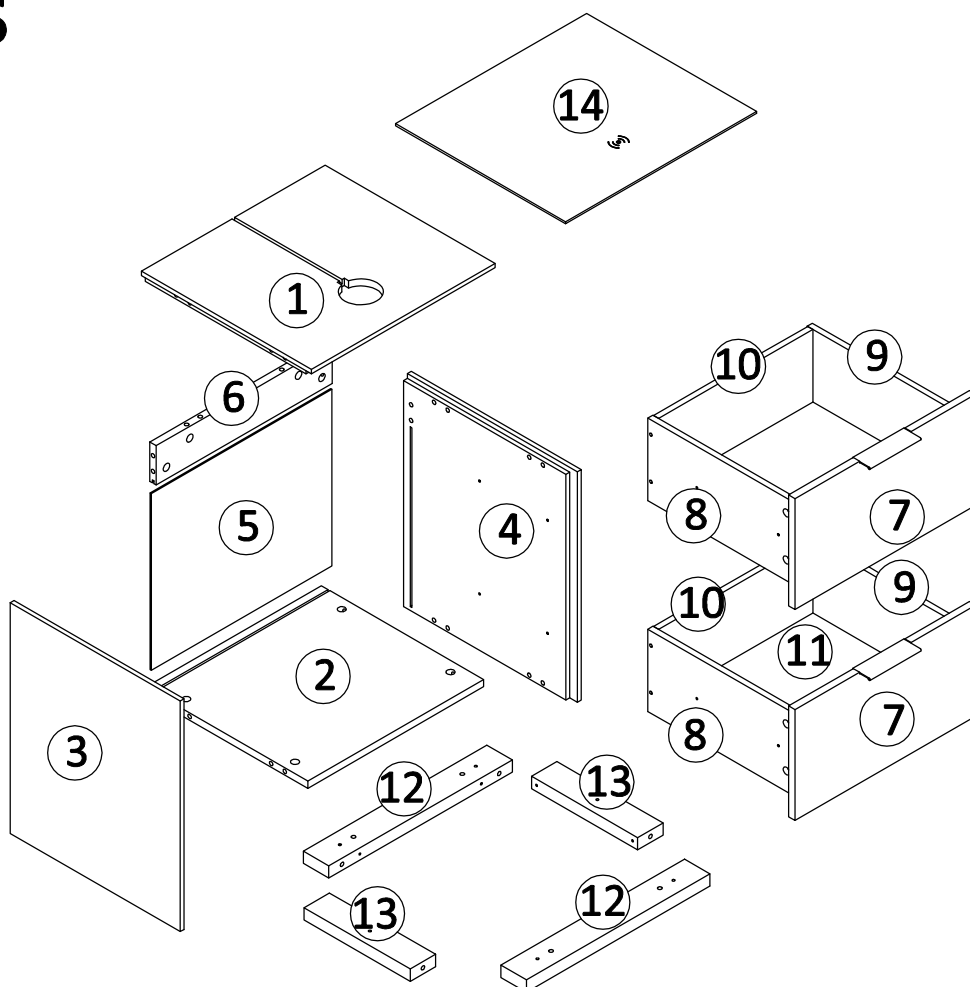


1


x4

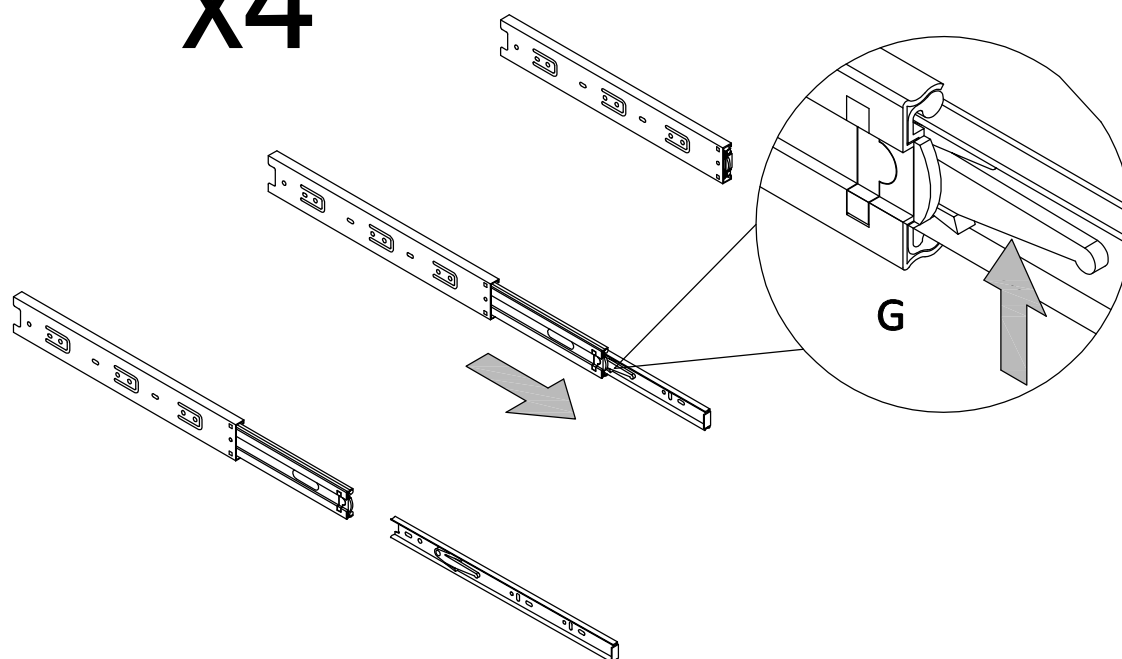


2

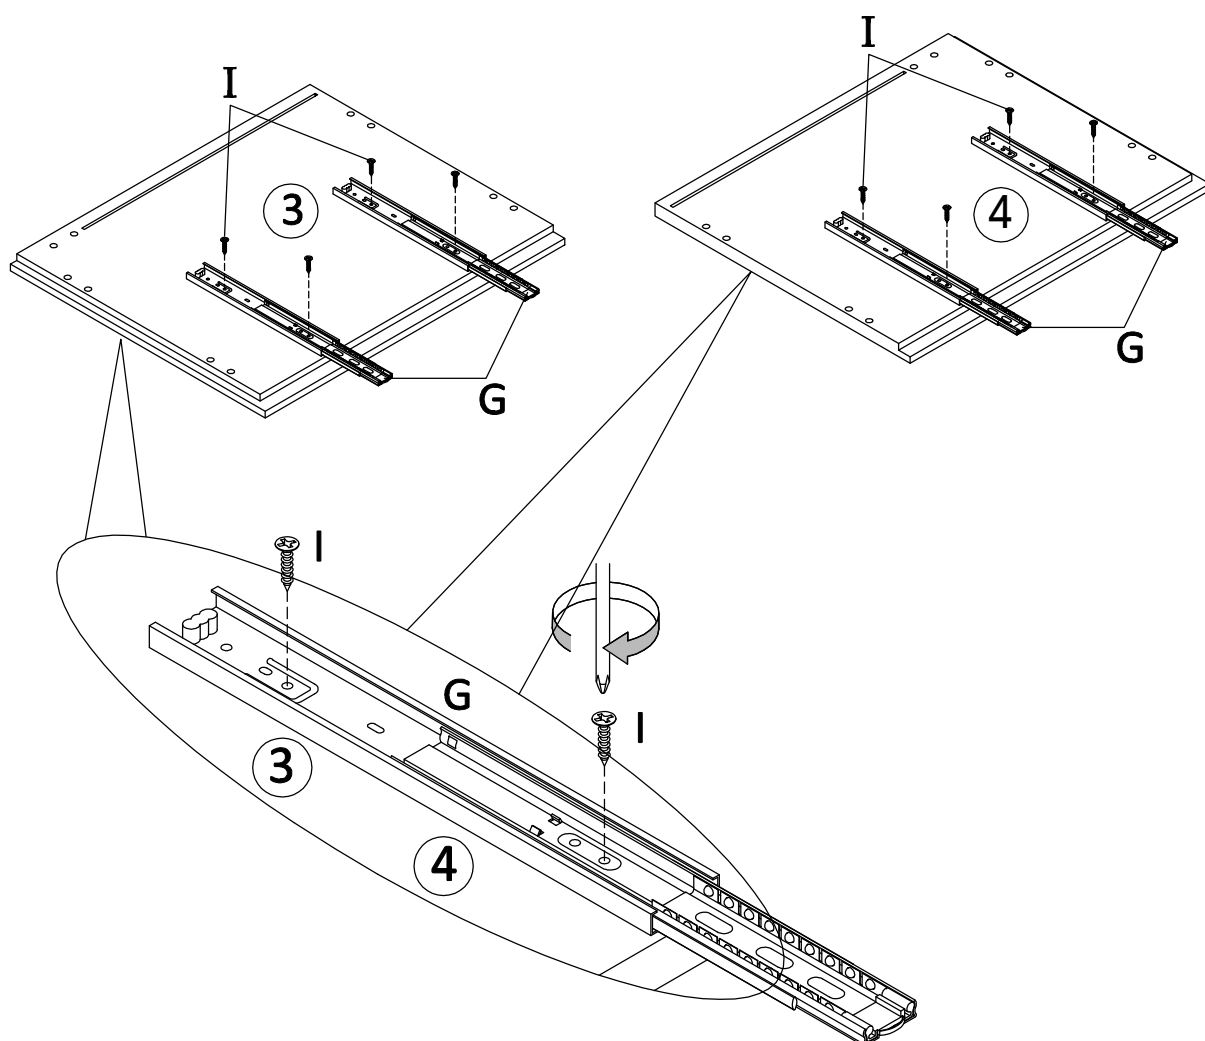


3

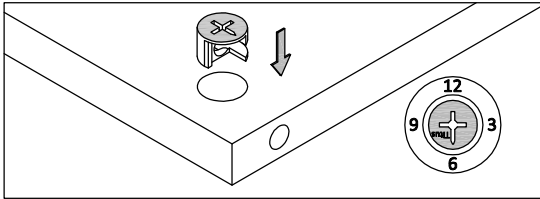


1. Press cam into pre-drilled hold with the arrow pointing toward the side hole. (see 6 O'clock.)

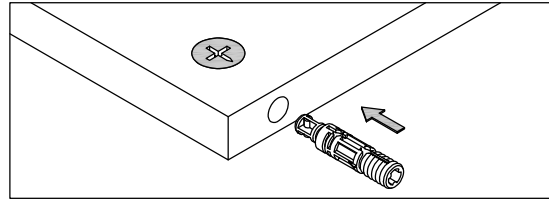


2. Push the bolt all the way into the side hole.

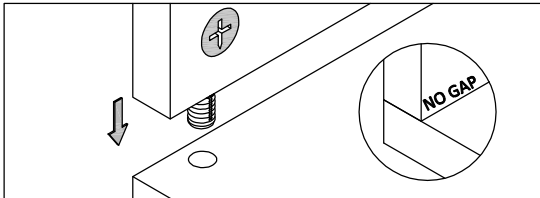


3. With all cam & bolts installed align and push the panels together - NO GAPS (MAKE SURE PANELS HAVE NO GAPS)

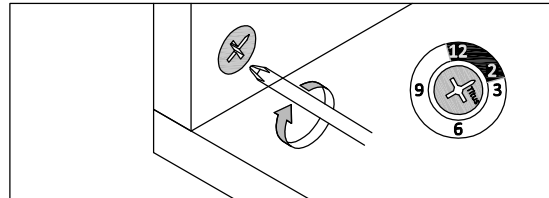


4. Turn cam clockwise to tighten. Secure connection by turning arrow on the cam to 2 O'clock to smoothly lock panels together.

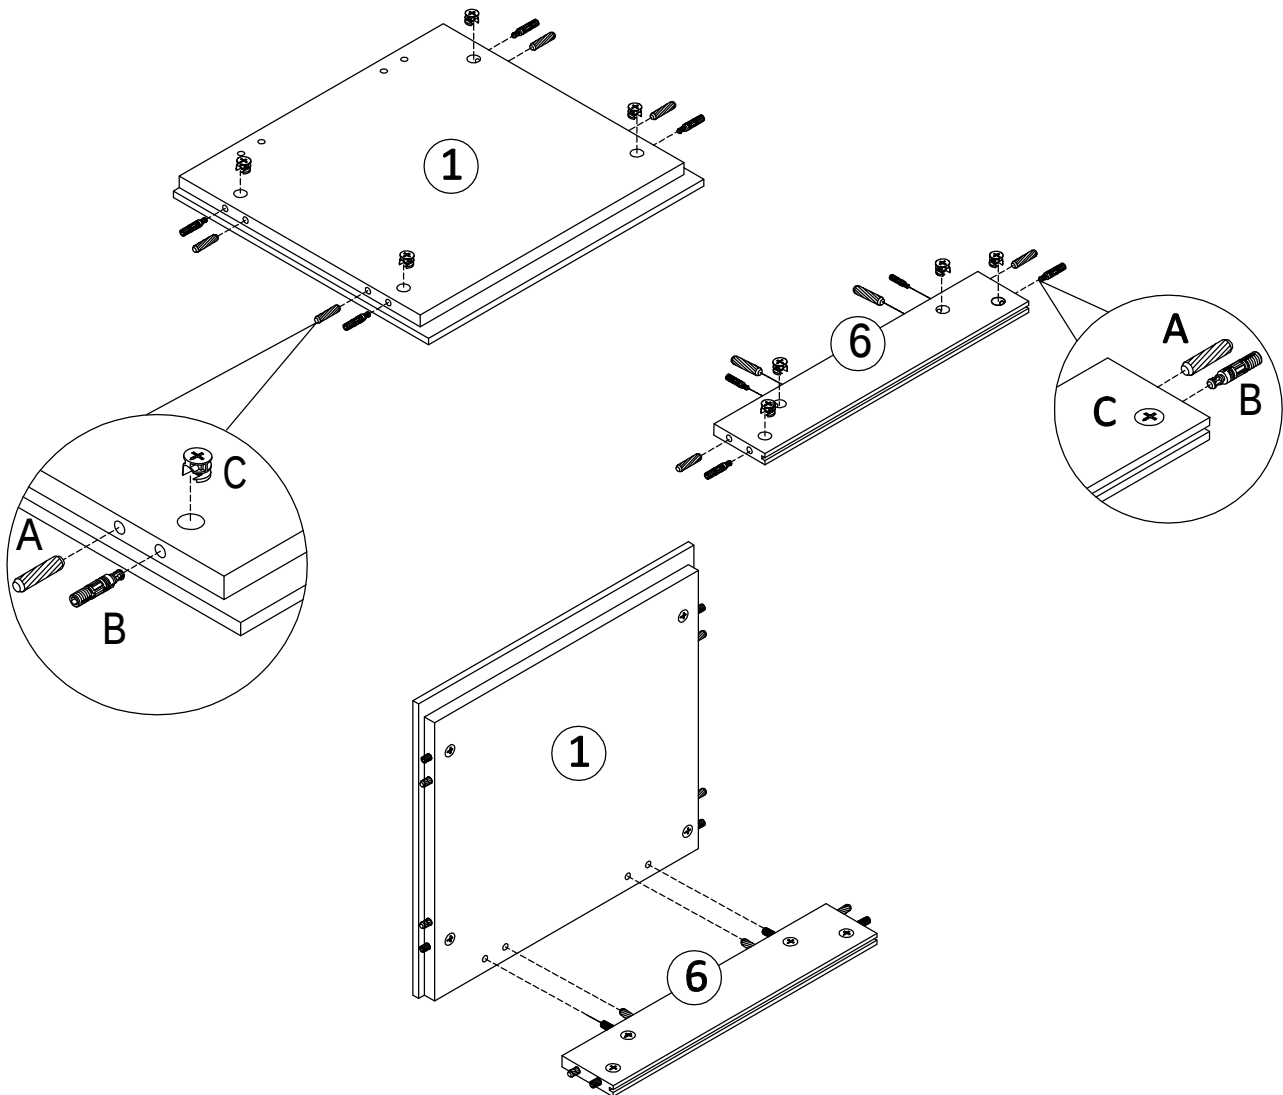


4

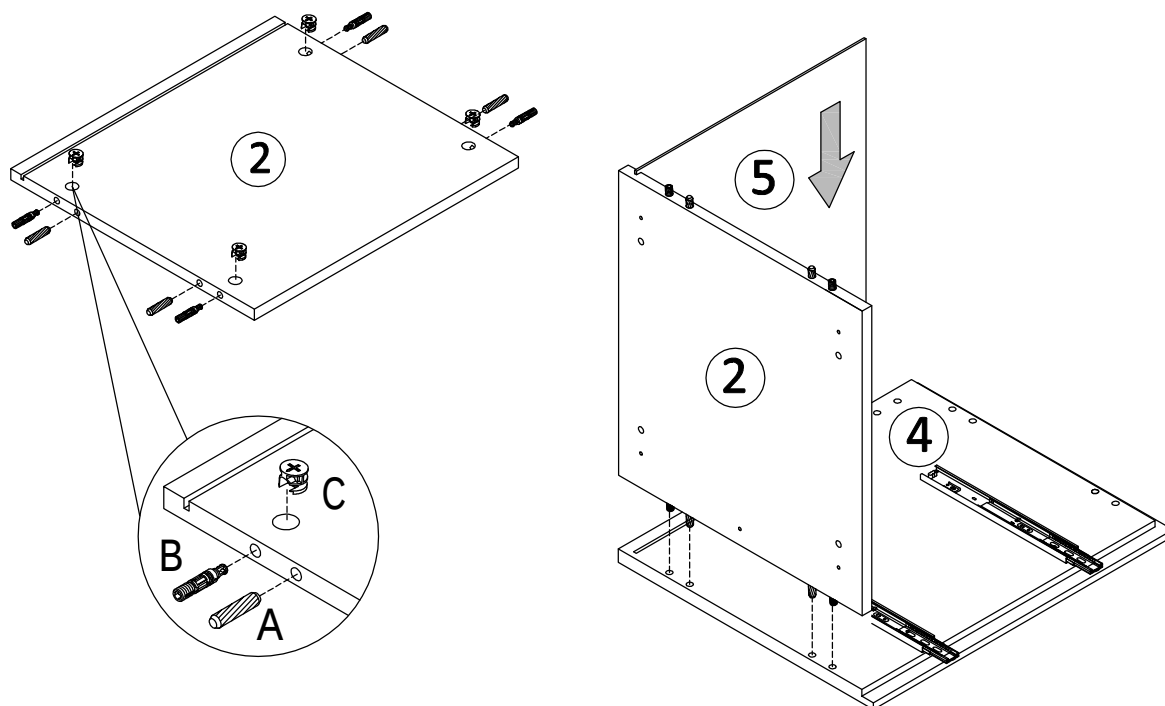

5



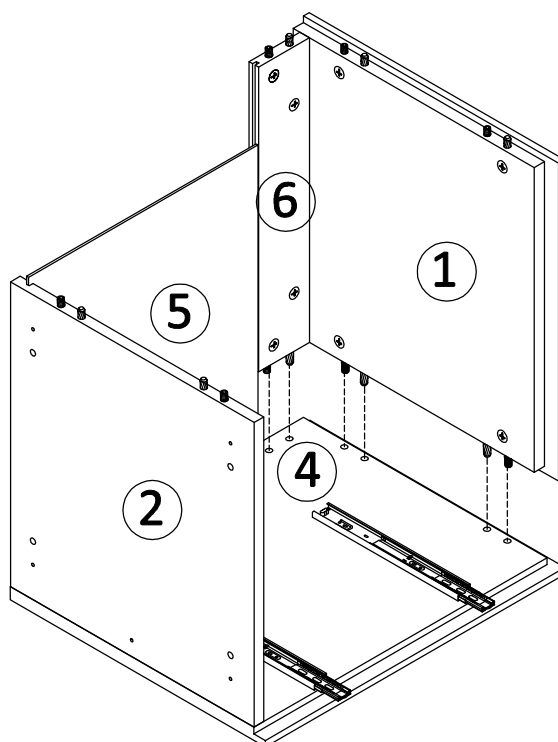


6

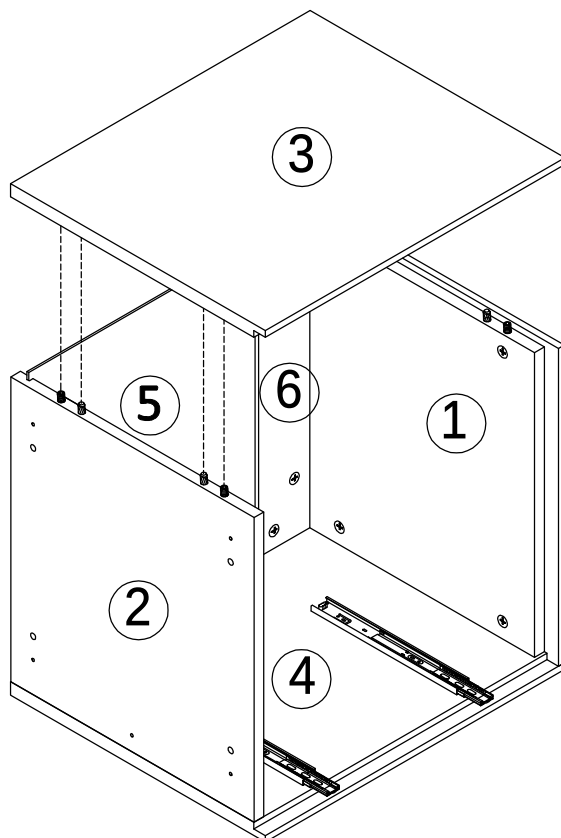


7

x2

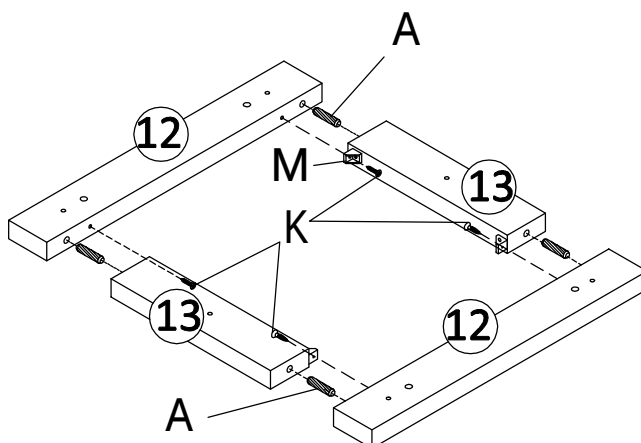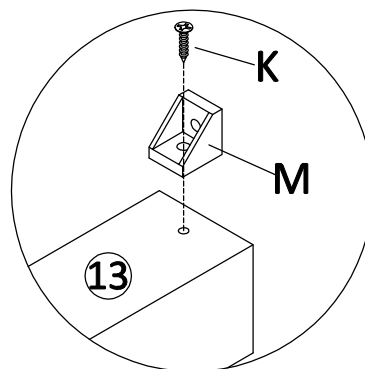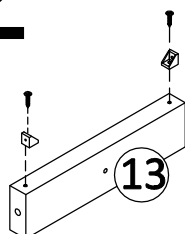


8

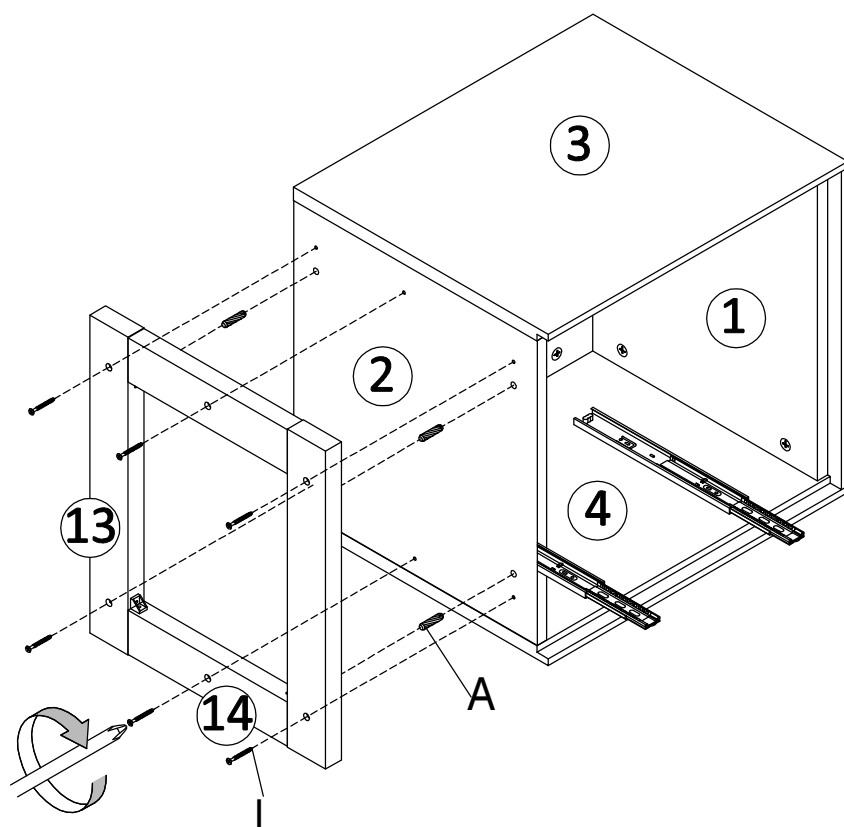

9


x2

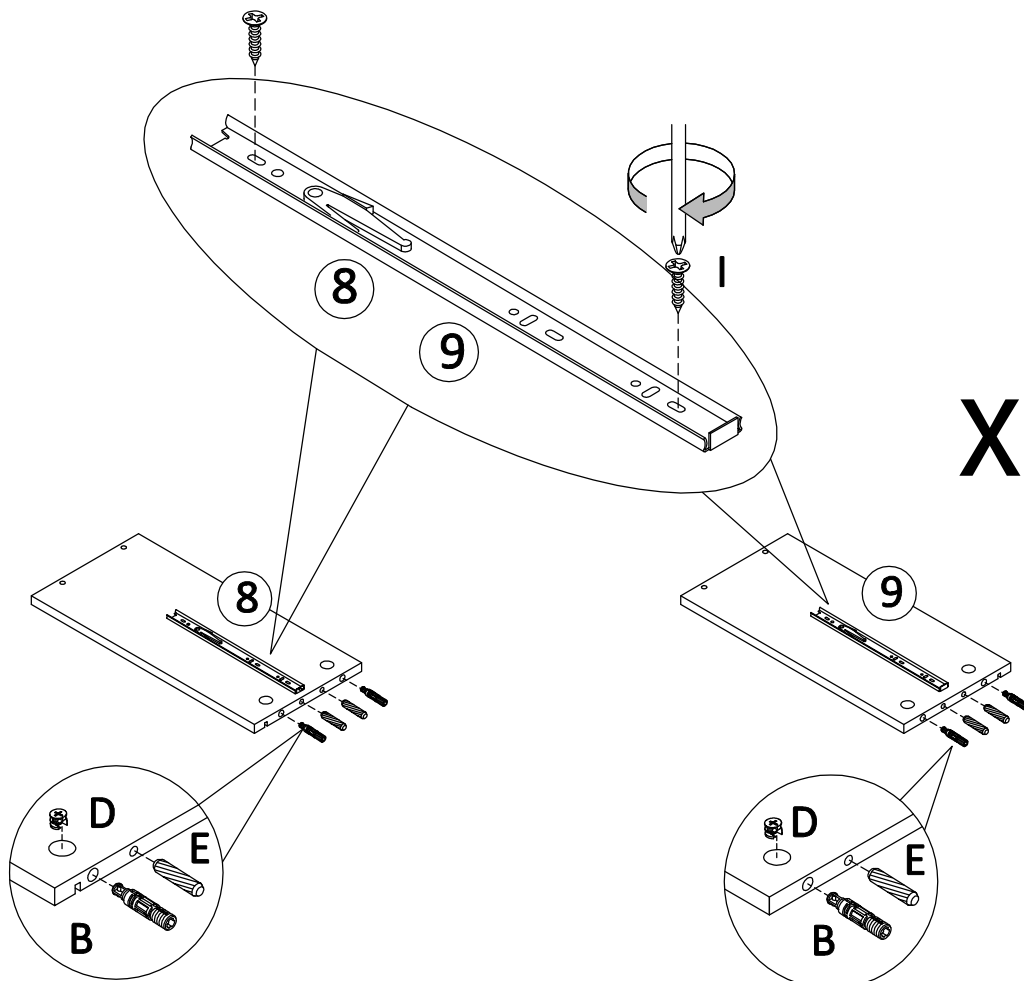

x2


10

x2

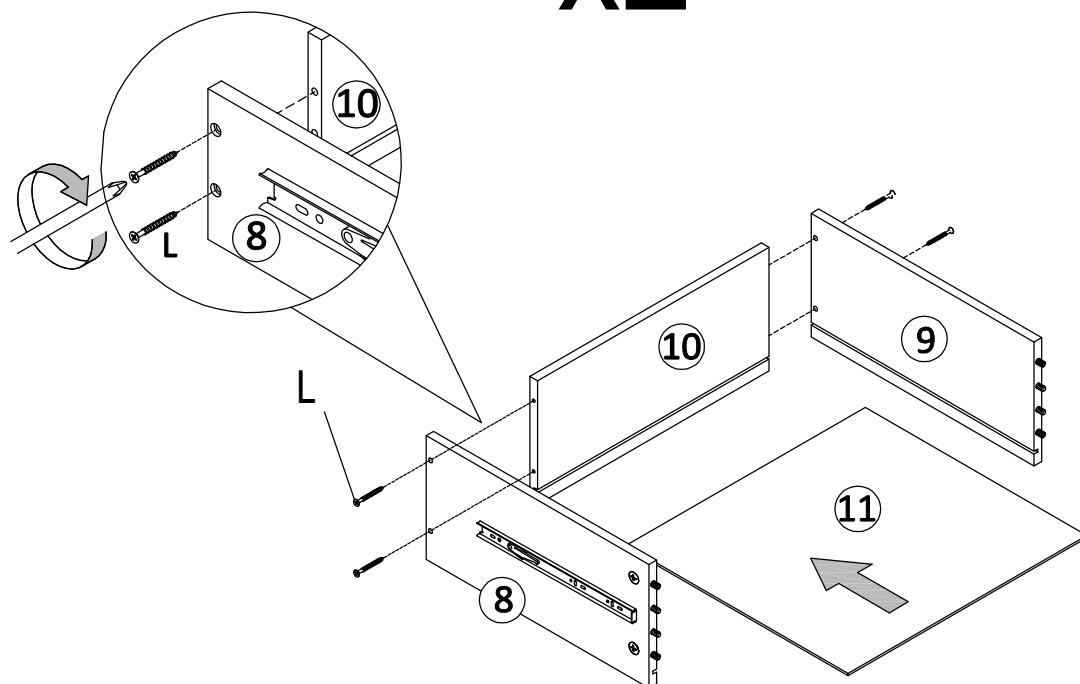


11


x2

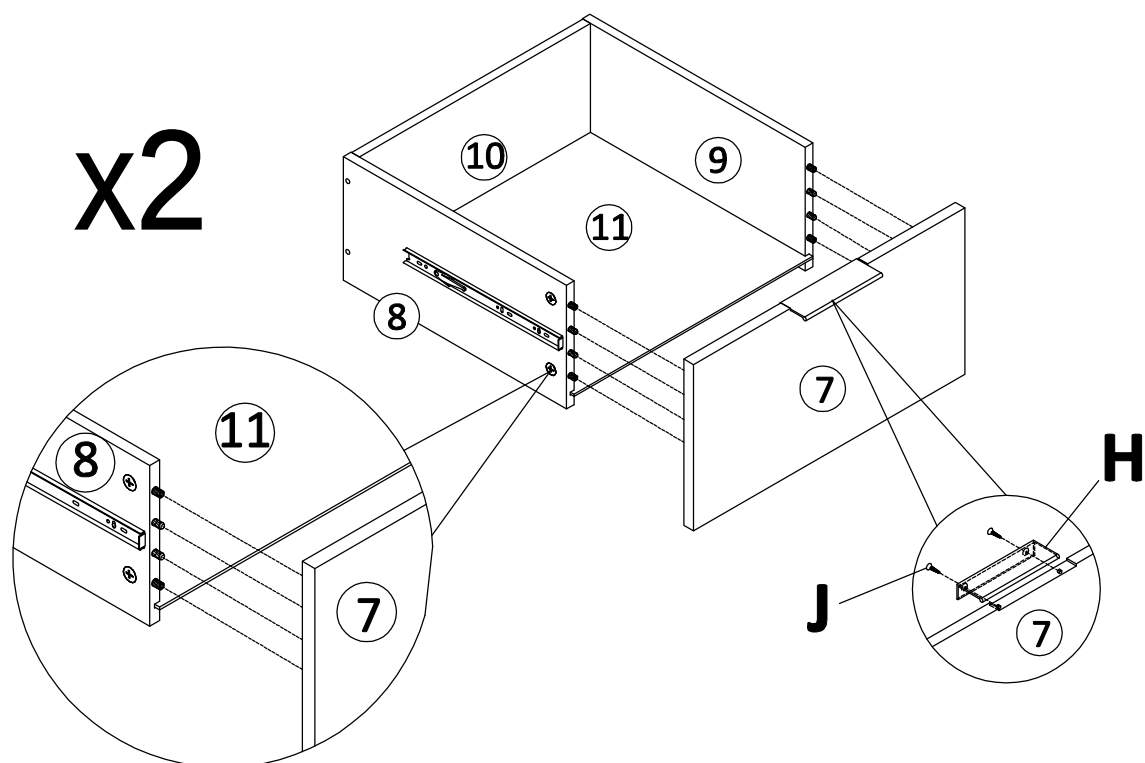

12

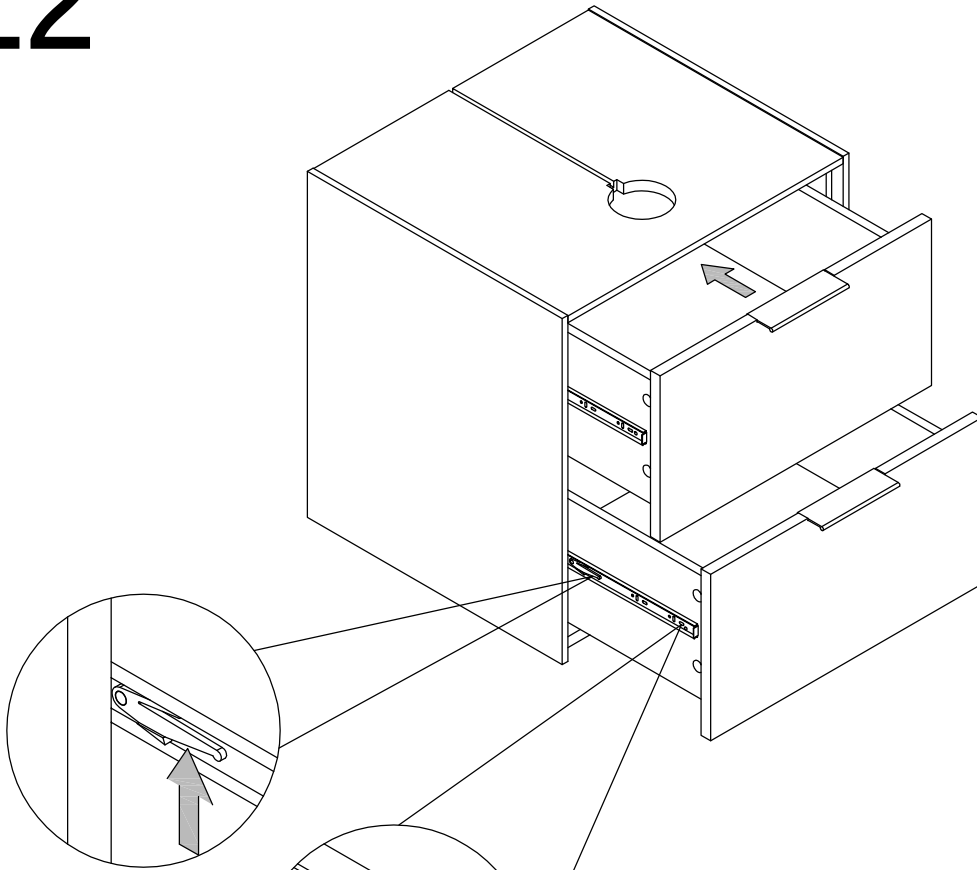


13

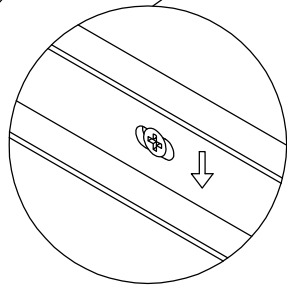


The gap between the drawers can be altered by loosening the screw and moving the runner up or down. When inserting the drawer into the runners for the first time please move the drawer back and forward a few times to ensure that the ball bearings run smoothly


XX=YY

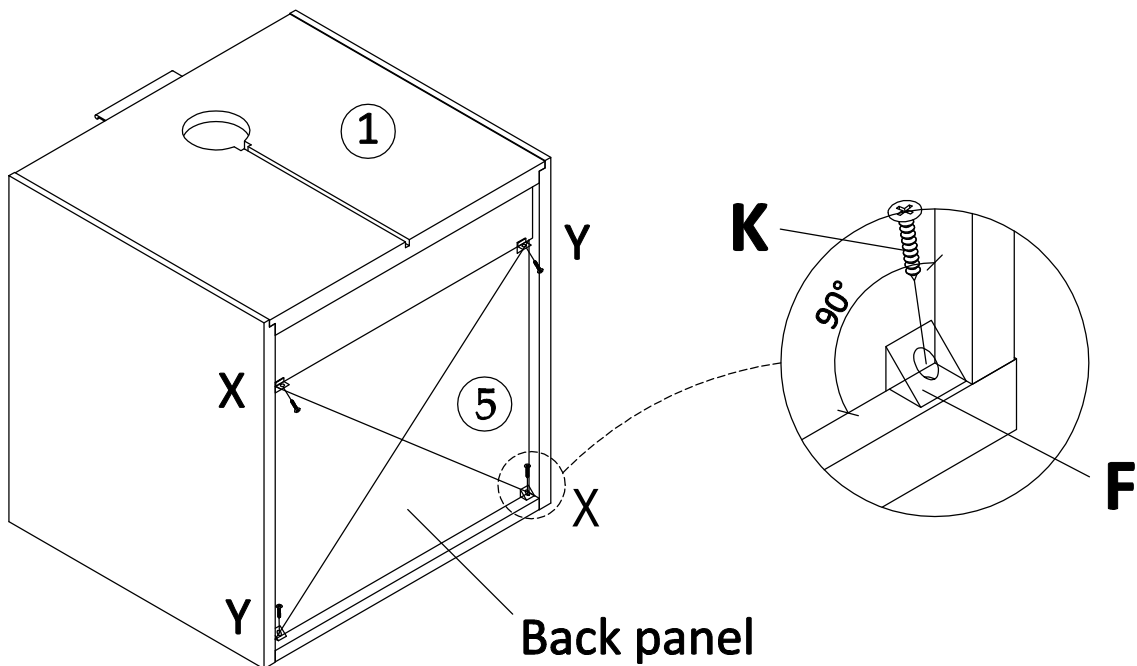

14

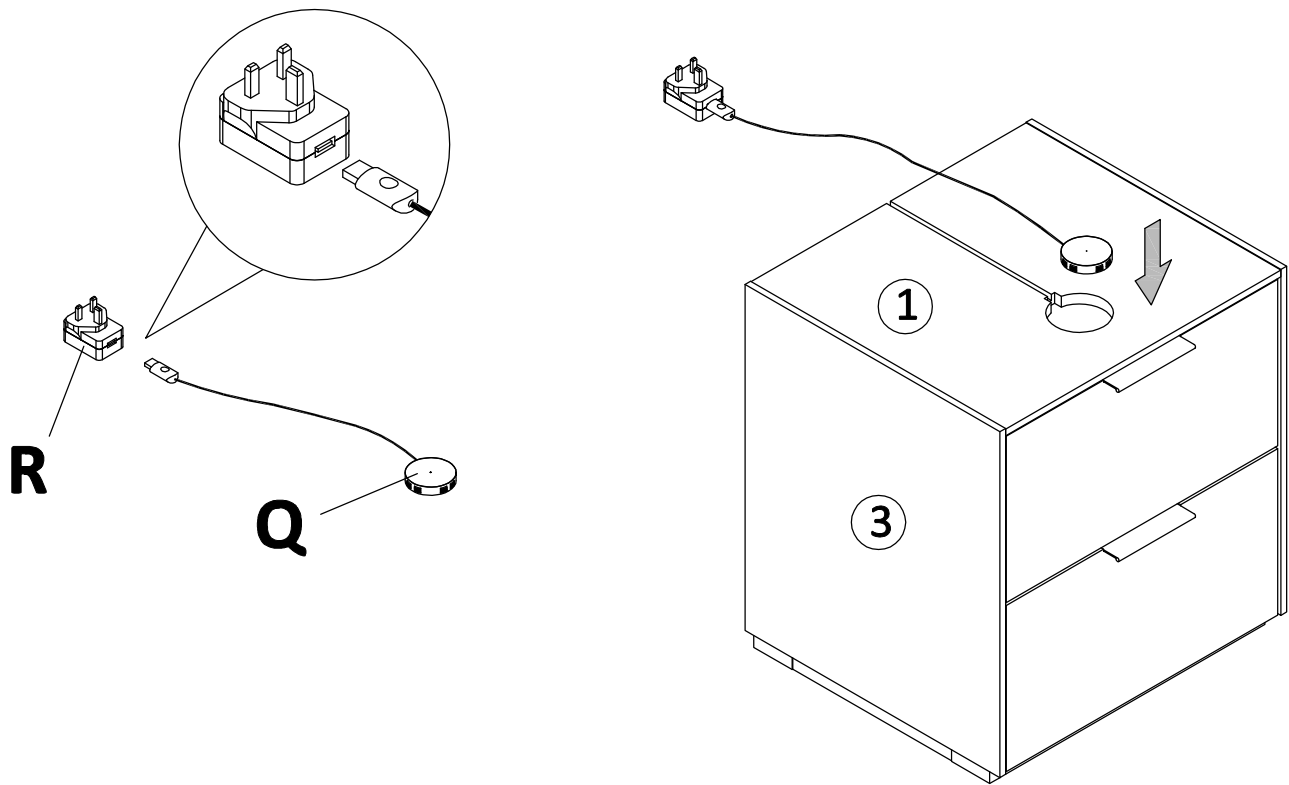

15

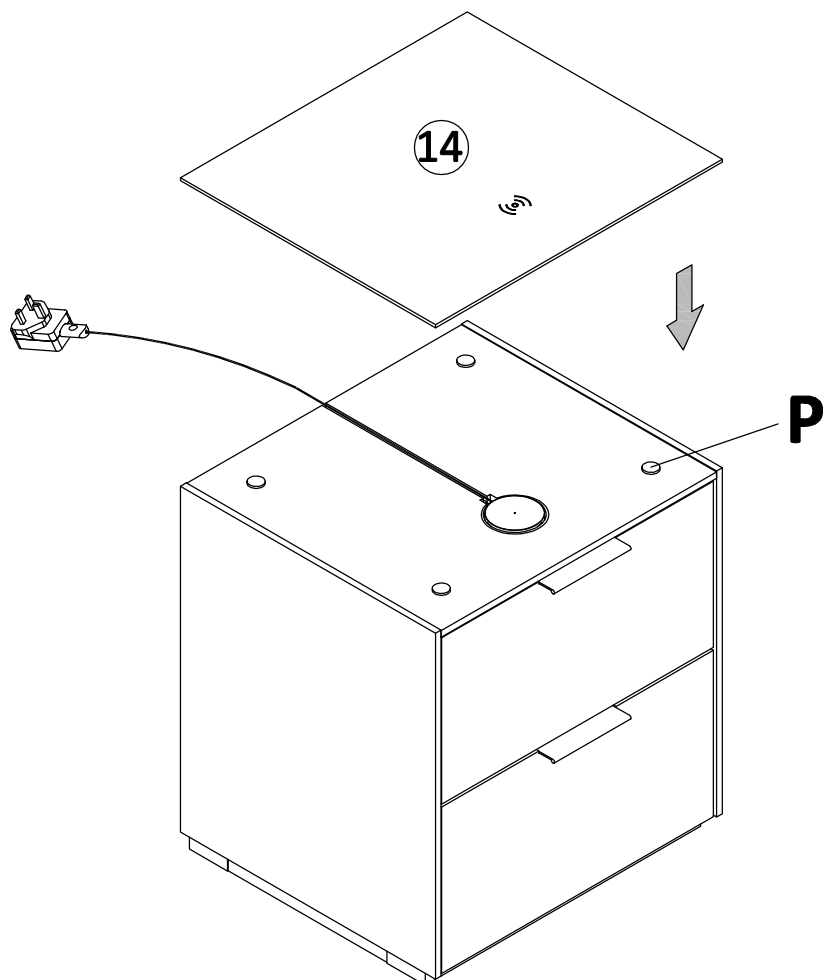


16


WARNING

THIS ITEM NEEDS TO BE FIXED TO A WALL

Please read these assembly instructions carefully as failure to adhere and non use of strap or brackets may cause the product to move and possibly lead to damage and/or injury if improperly fitted. If in doubt consult a qualified technician.

1. Place the unit into required position.
2. Ensure unit is level before securing to the wall.
3. Attach a bracket (N) to the unit back frame of the top with the short screws (K) provided.
4. Attach a bracket (N) to the wallboard with the long screws (not provided).
5. Move the unit into it's final position. Thread a strap (O) through the bracket (N) as show in the below illustration, tighten strap (O) until snug. Do not over tighten.
6. Make sure the bracket (N) is firmly attached to wallboard and unit and the strap (O) is snug.
7. Please note that the wall fixings such as wall plugs are not supplied - please secure the unit to the wall using the appropriate fixings for your wall type. These will be readily available from your DIY/Home improvement store.

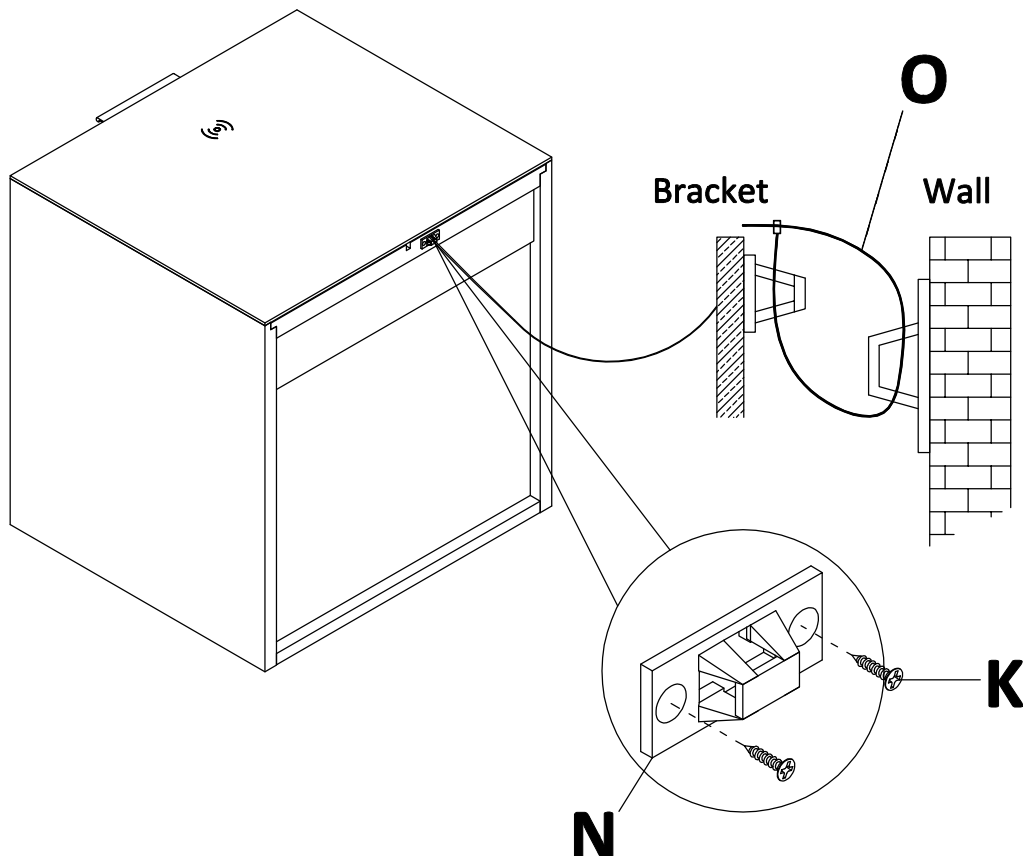

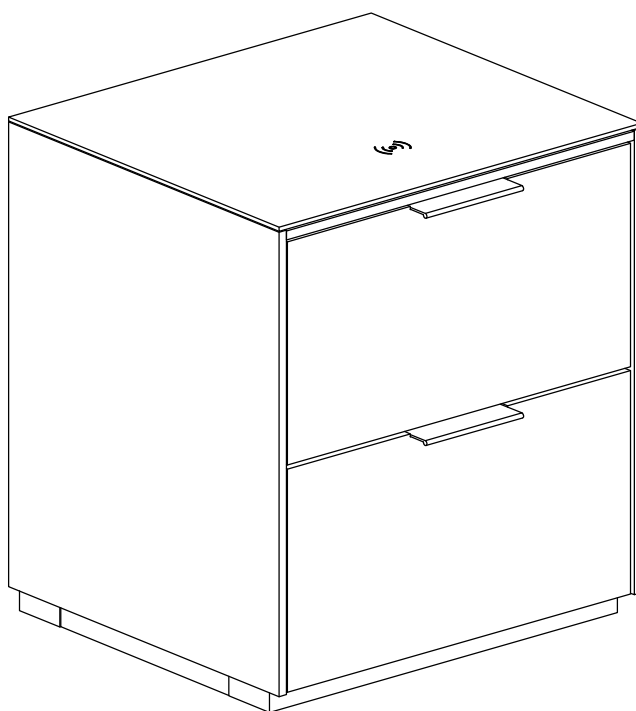

CLEANING ADVICE:

To avoid scratching the painted and glass surfaces,
clean only with a non abrasive cleaner.

Using the wireless charging

NOTE :

The wireless charging will only work with Qi enabled wireless charging phones. Please check the phone is wireless charging compatible.

- Using the 2amp plug provided, connect the wireless charger USB cable to the plug and connect to the power source.
- To charge your phone, simply place the phone on the charging position indicator and the phone will start to charge.
- To check if the charger is working, simply move the phone and if the red light under the glass is on, this indicates that the charger is working. You may need to reposition the phone slightly if the red light is not showing.
- For the charger to work properly, the charging position within the back of the phone needs to sit aligned with the red light.
- Note that the charger is designed for night time and convenient charging, it is not a fast charge.
- An element of heat is created during the wireless charging process, this is perfectly normal and safe.. The charger has a built in temperature control and will not over heat.
- If a phone has a thick case, it may affect the wireless charging, to resolve this remove the phone case during charging.

For a guidance and help and contact details, please visit our website :

www.frankolsenfurniture.co.uk