


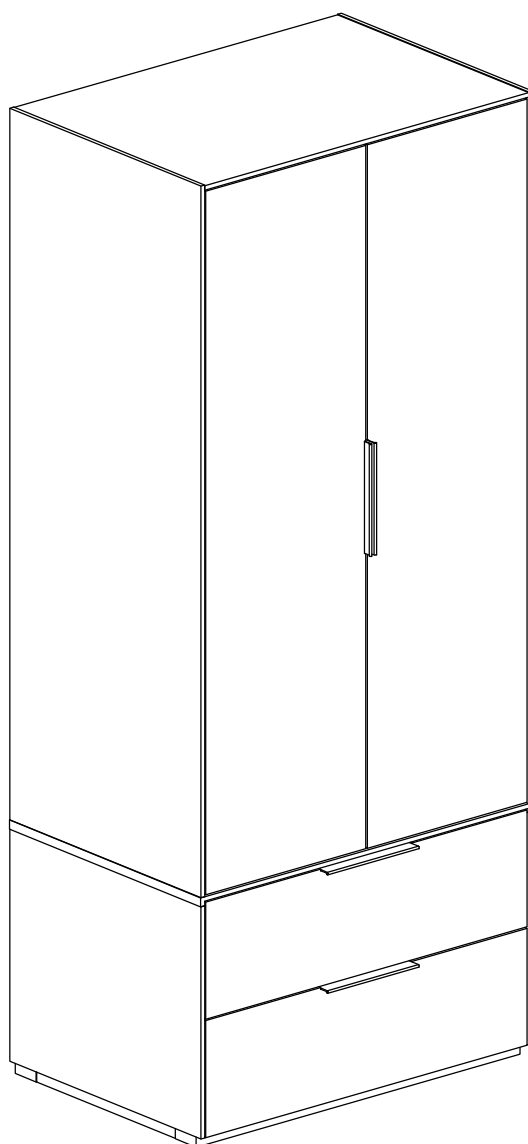



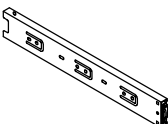










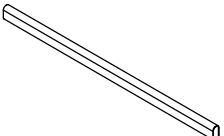


Frank Wardrobe



Assembly Instructions



HARDWARE


A  x28	B  x50	C  x42	D  x8	E  x4	F  x10
G  x4	H  x4	I  x16	J  x44	K  x22	L  x22
M  x4	N  x4	O  x2	P  x6	Q  x2	R  x1

PARTS

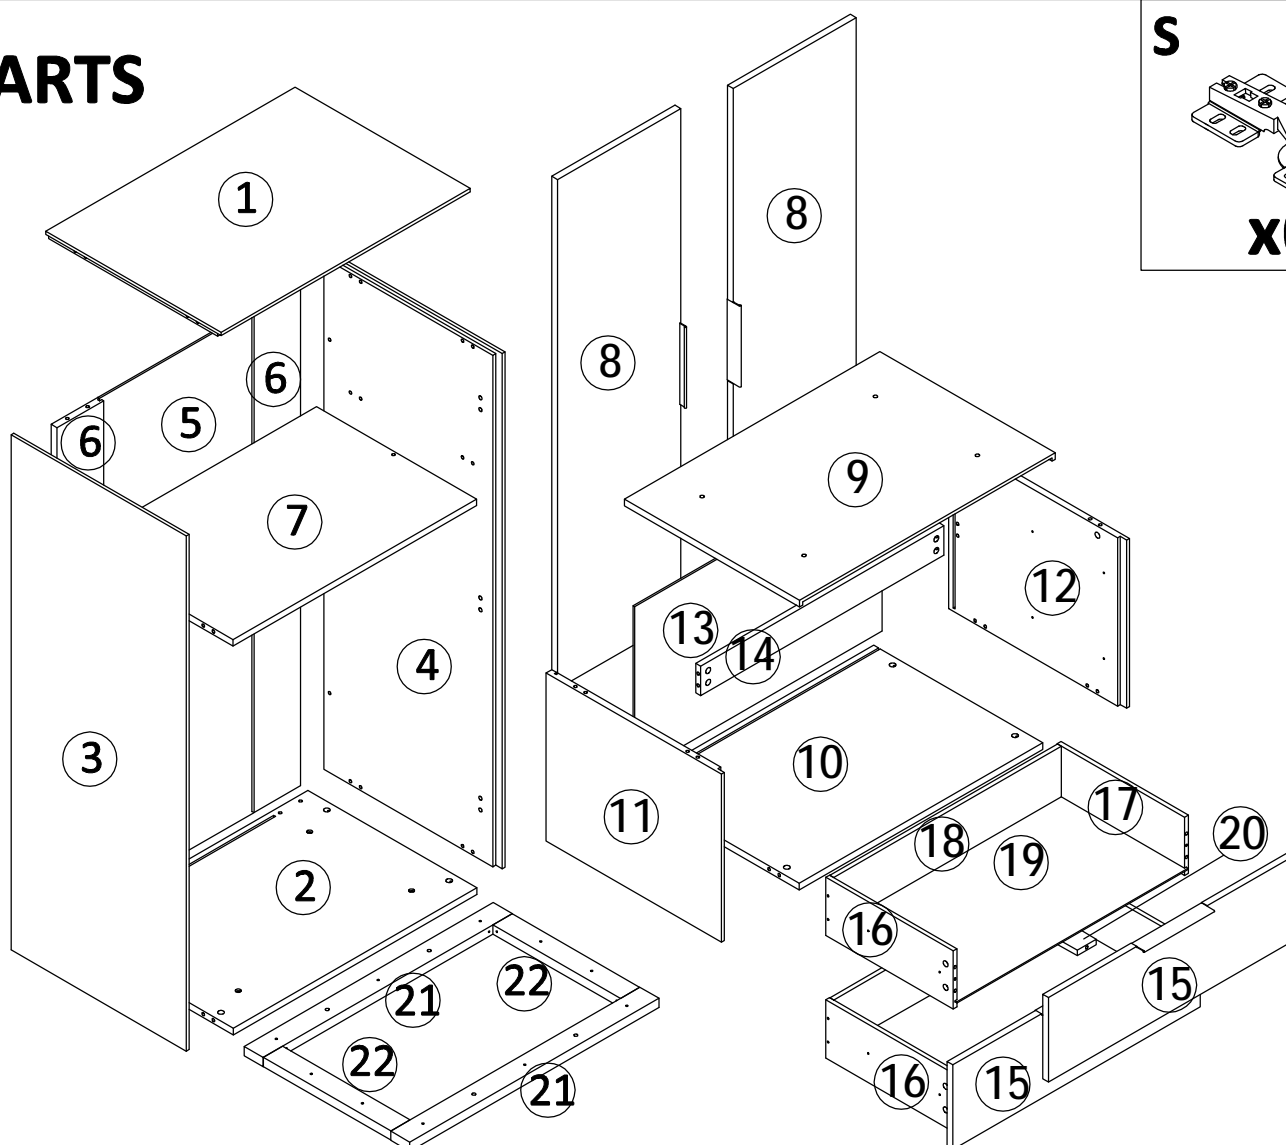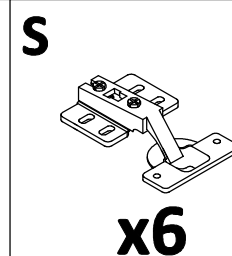


1


x4

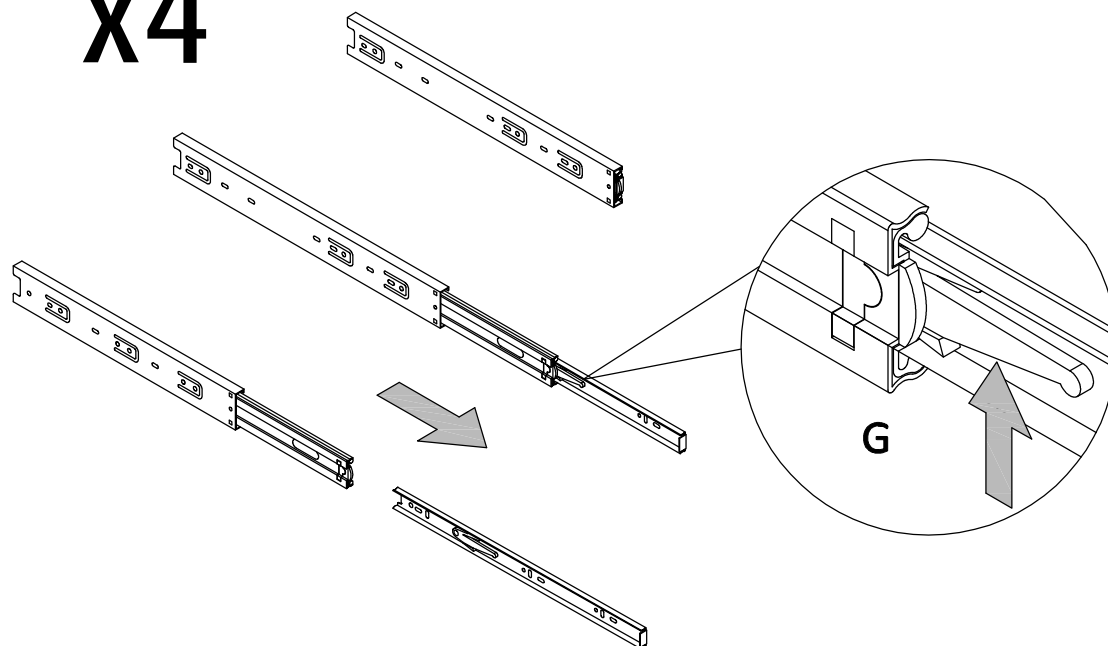


2

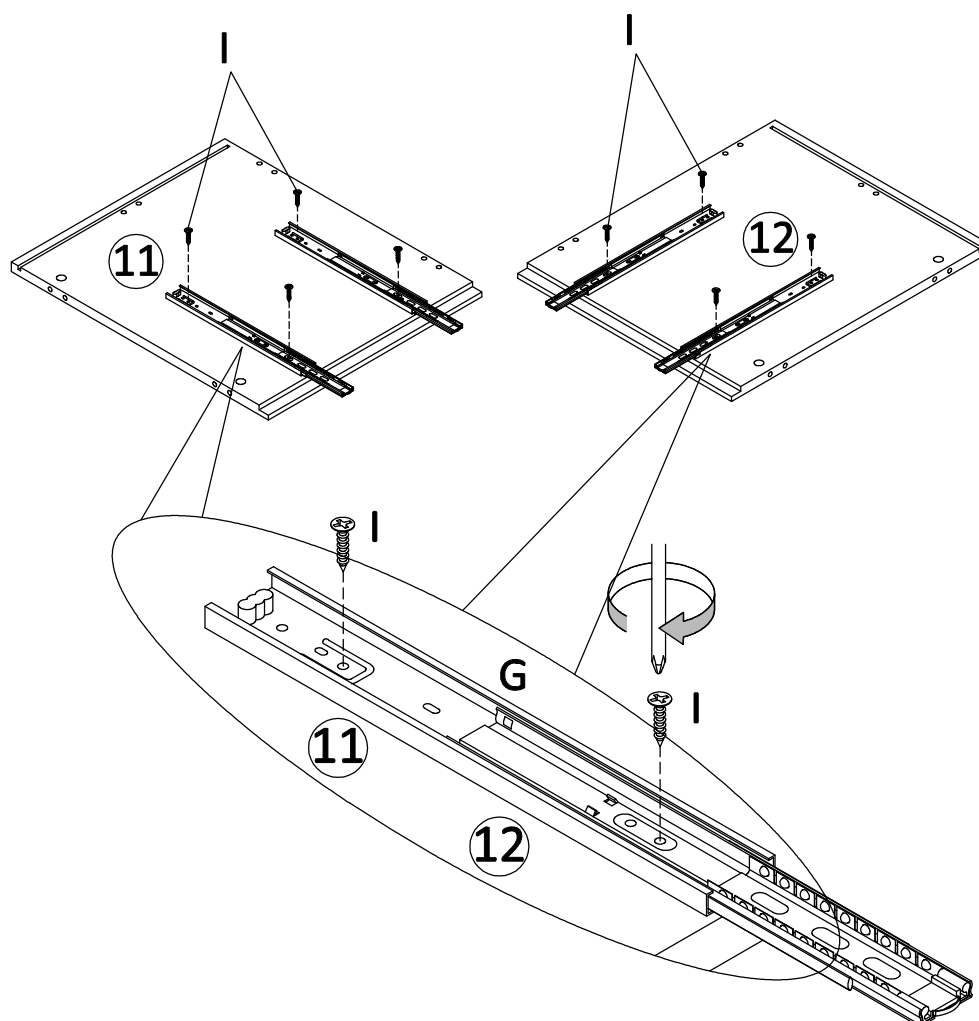


3

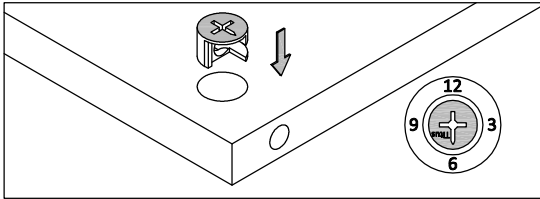


1. Press cam into pre-drilled hold with the arrow pointing toward the side hole. (see 6 O'clock.)

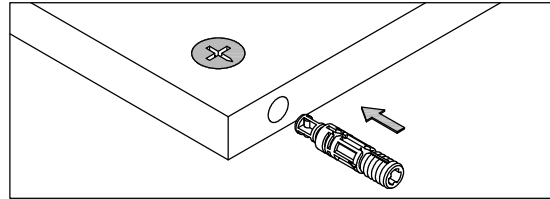





2. Push the bolt all the way into the side hole.

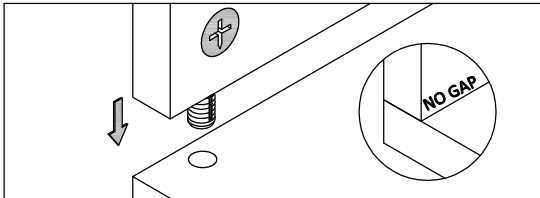


3. With all cam & bolts installed align and push the panels together - NO GAPS (MAKE SURE PANELS HAVE NO GAPS)

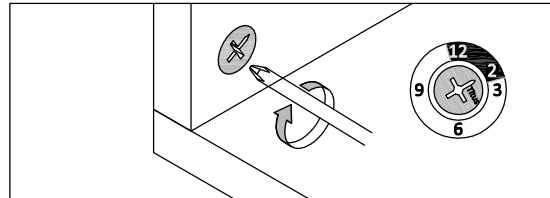


4. Turn cam clockwise to tighten. Secure connection by turning arrow on the cam to 2 O'clock to smoothly lock panels together.

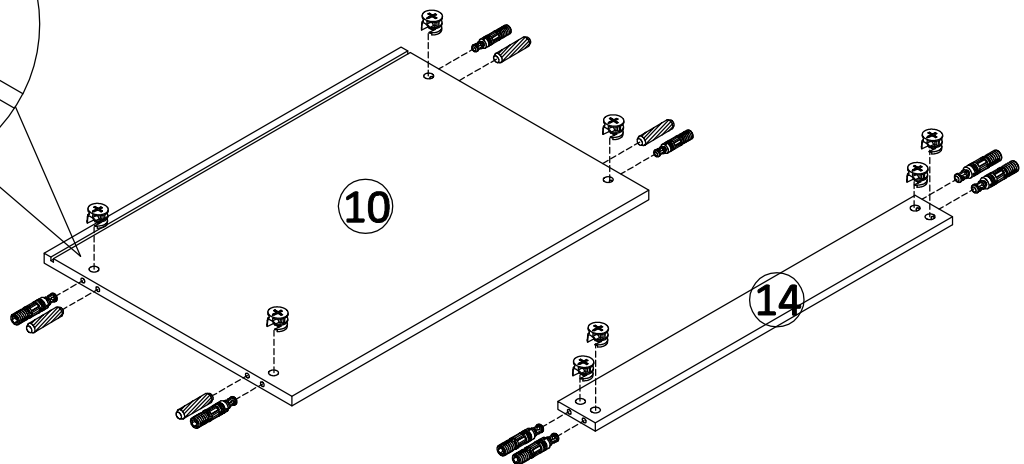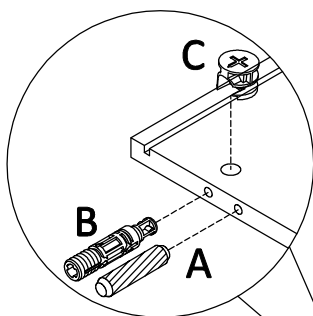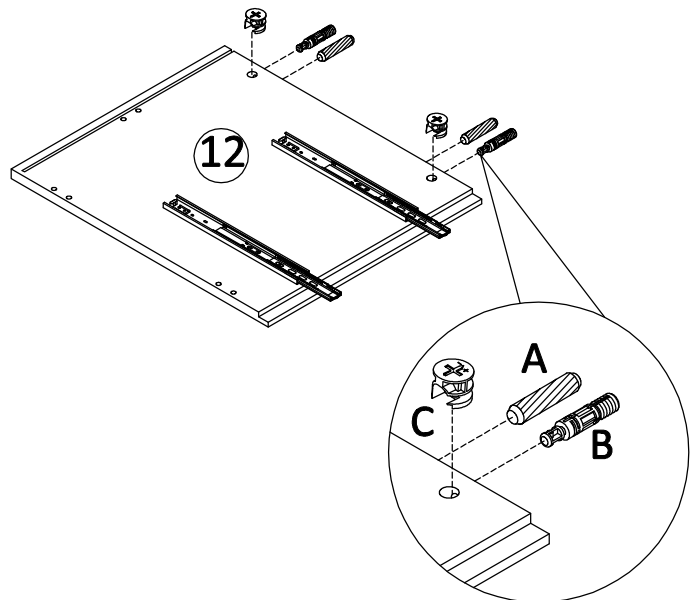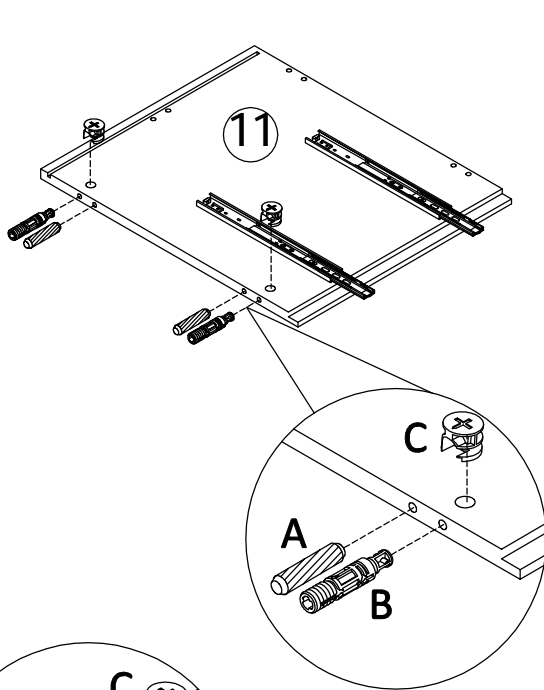


4

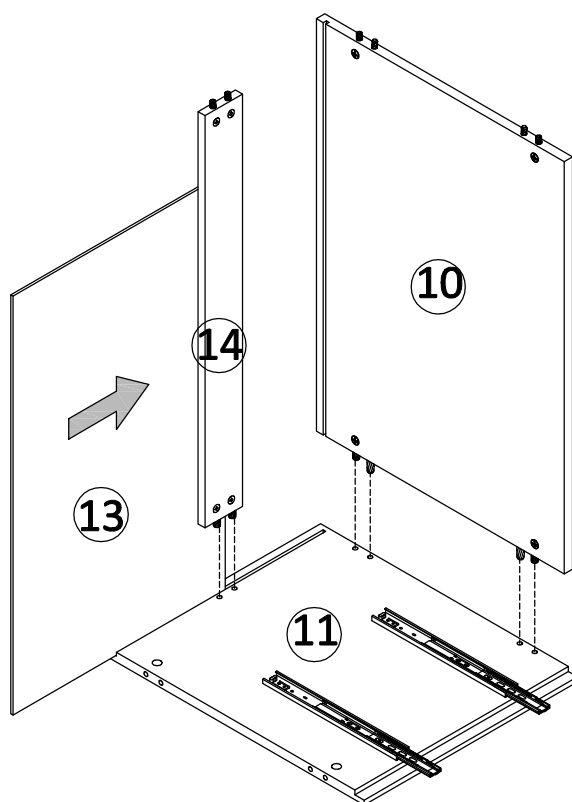

5



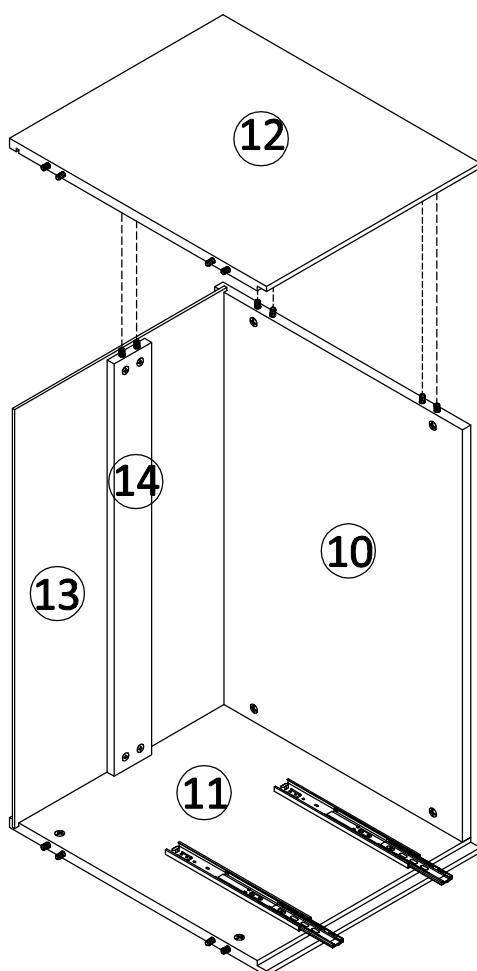


6

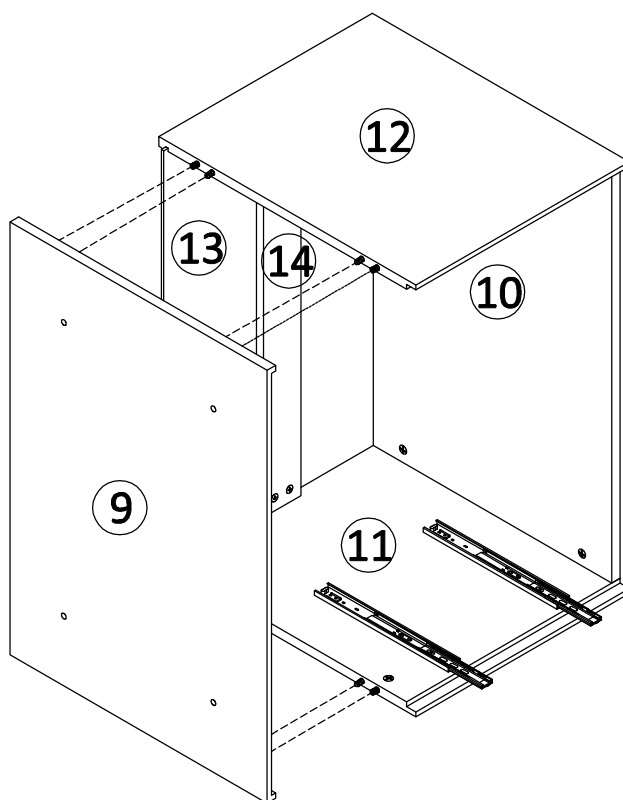


7

x2

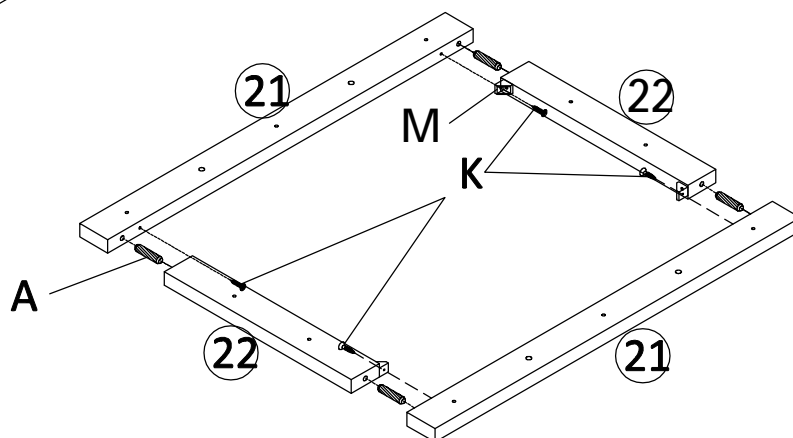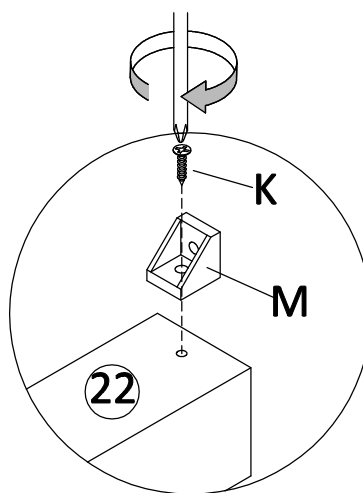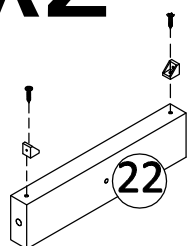


8

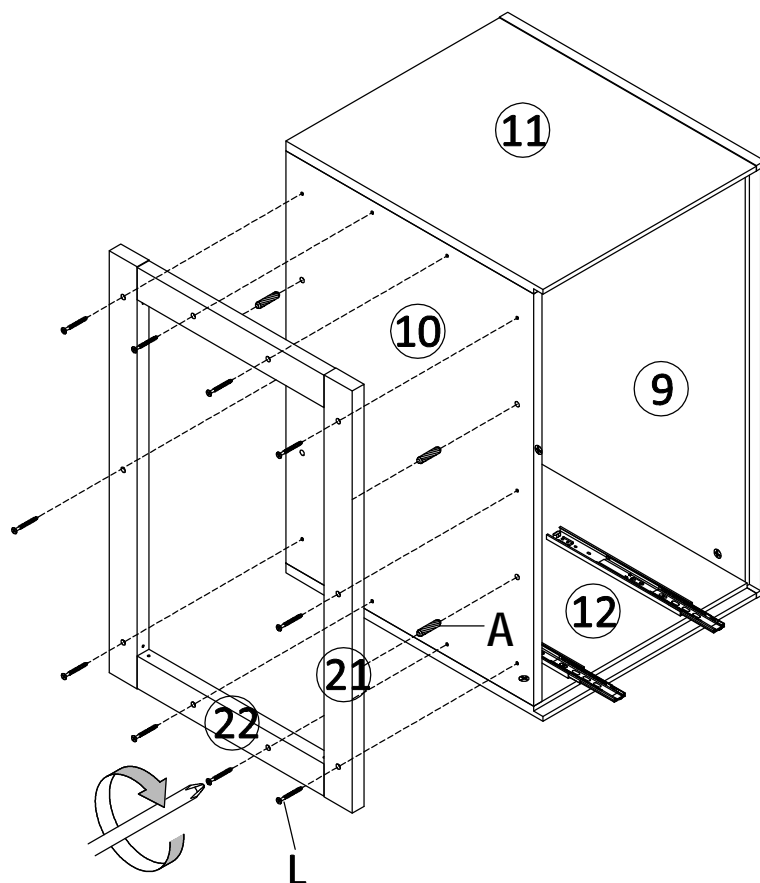

9


x2

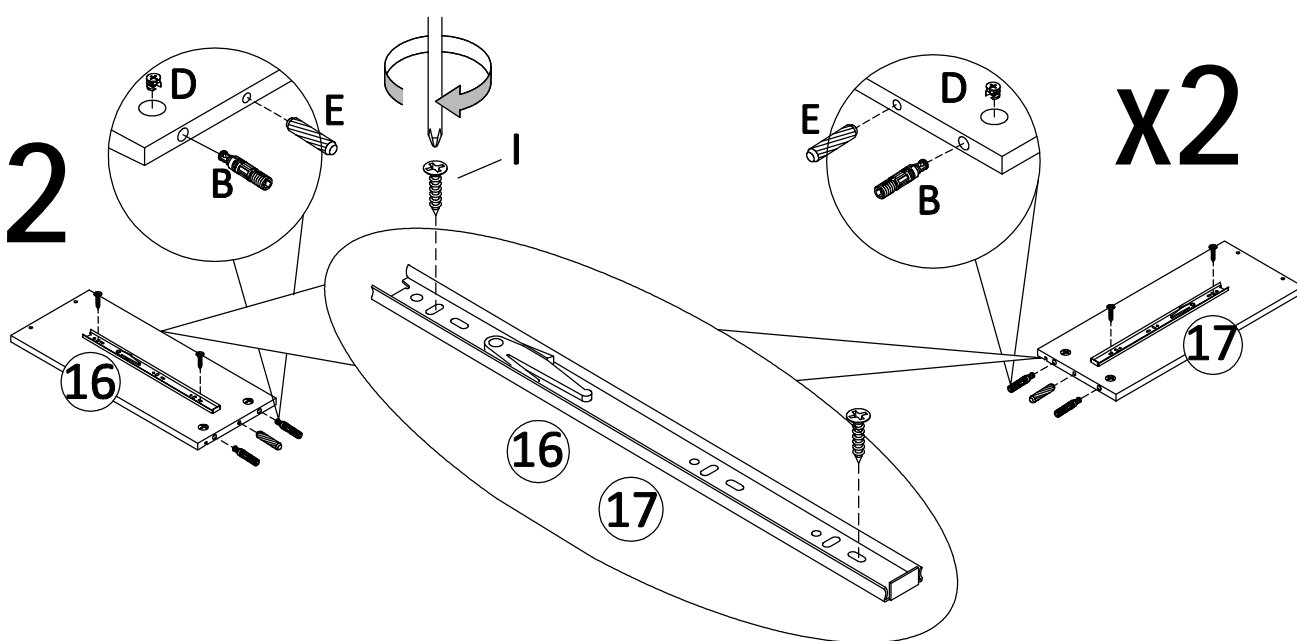

x2


10

x2

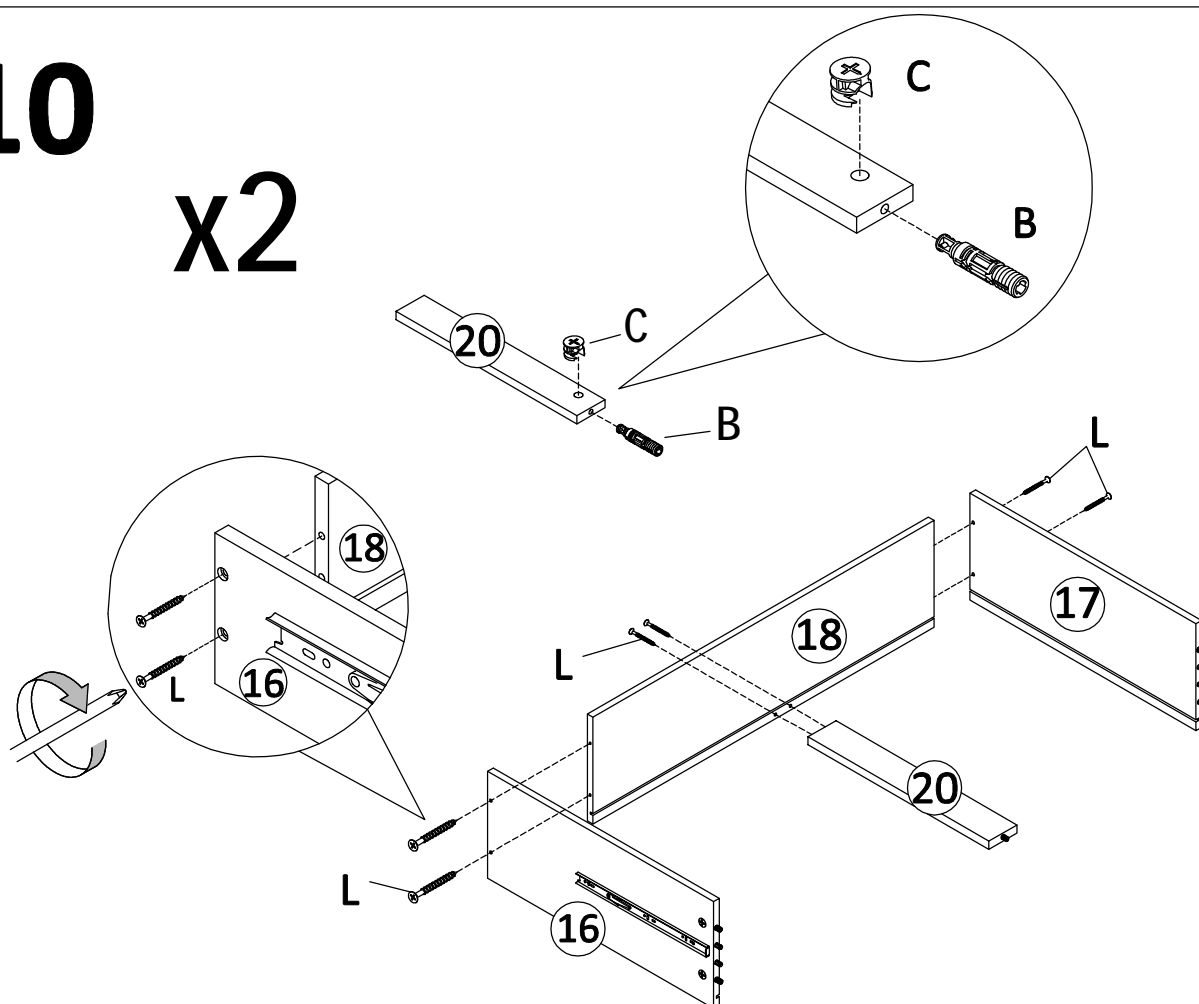


11

x2

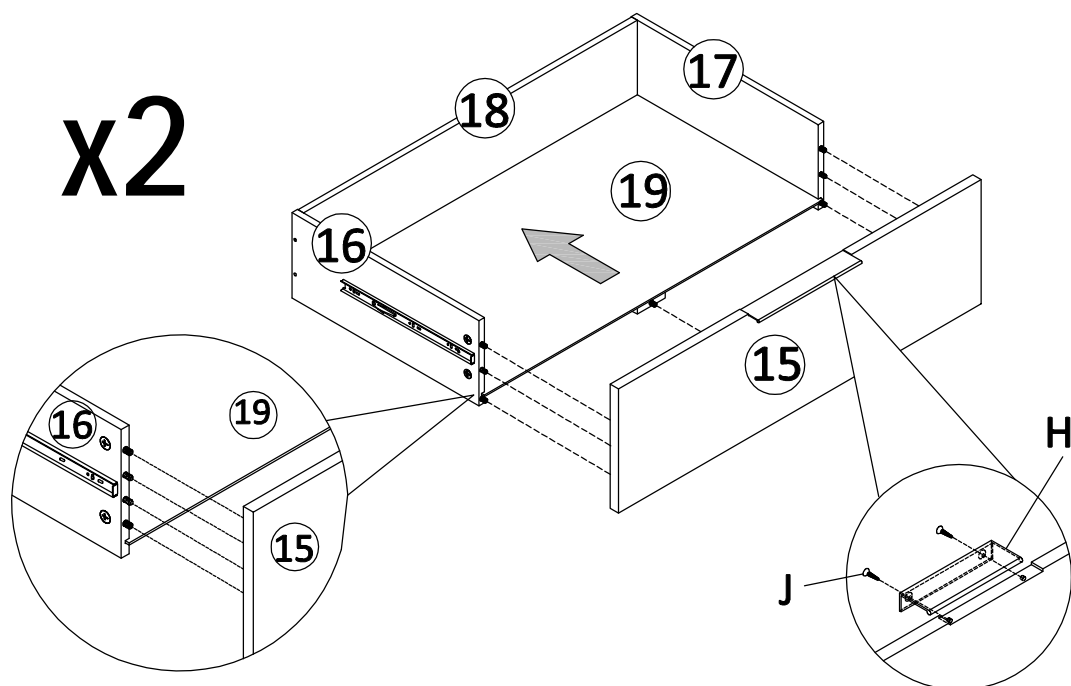


12

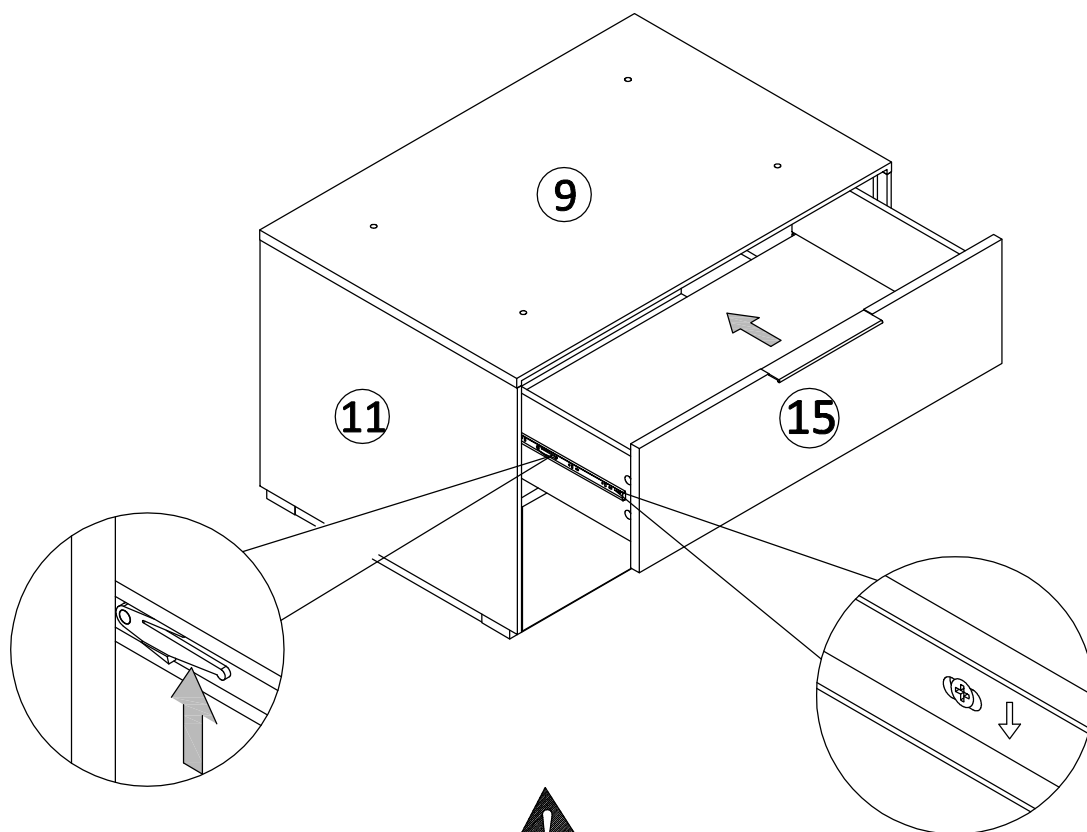


The gap between the drawers can be altered by loosening the screw and moving the runner up or down. When inserting the drawer into the runners for the first time please move the drawer back and forward a few times to ensure that the ball bearings run smoothly

13


XX=YY

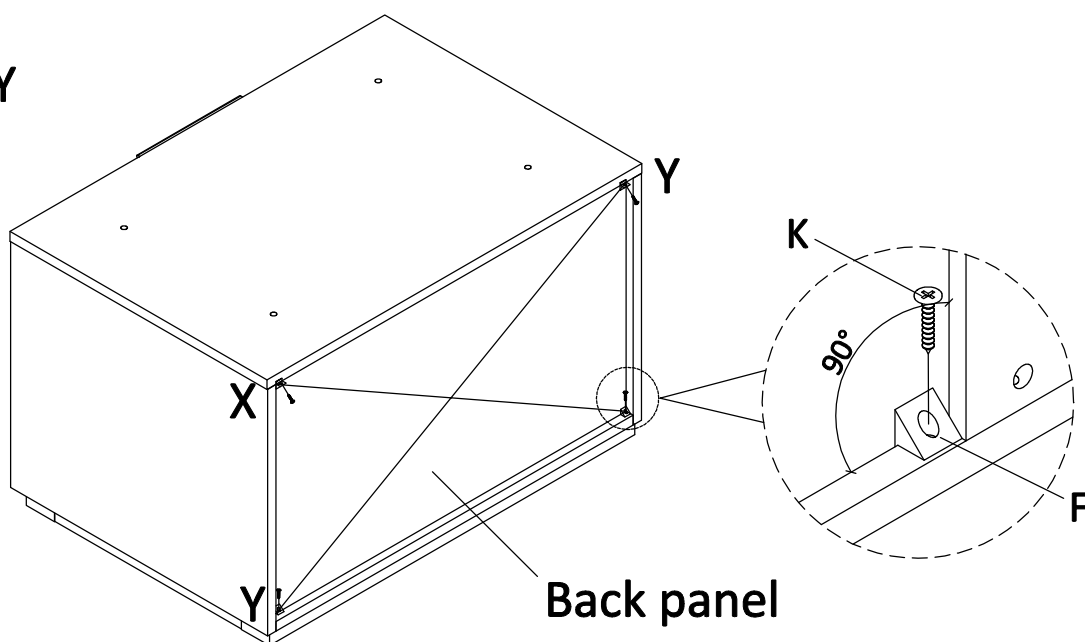


14

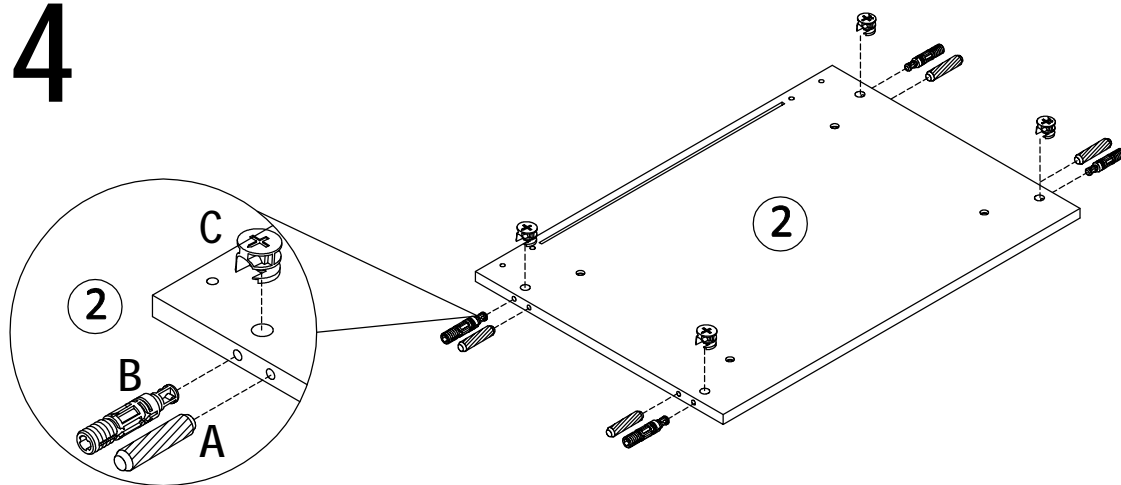


x2

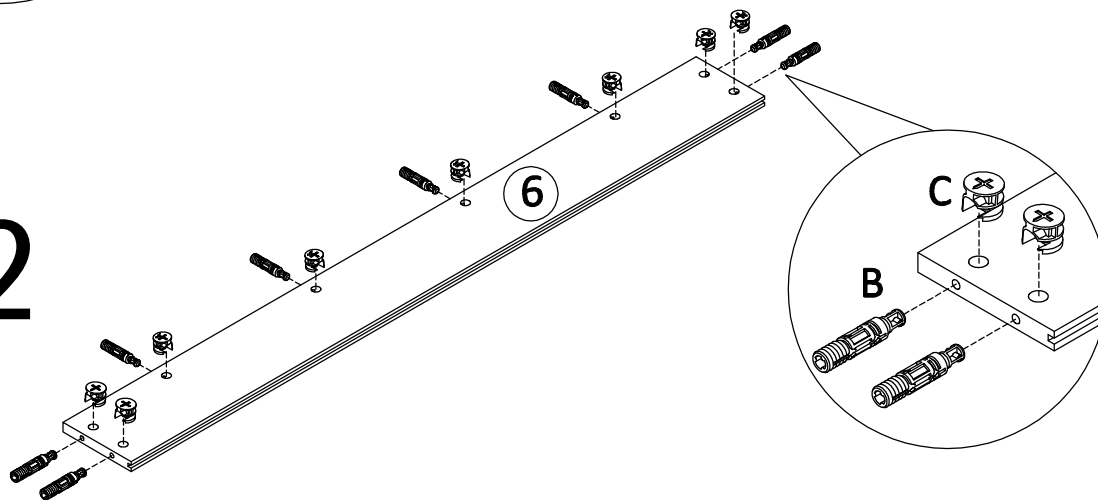


15

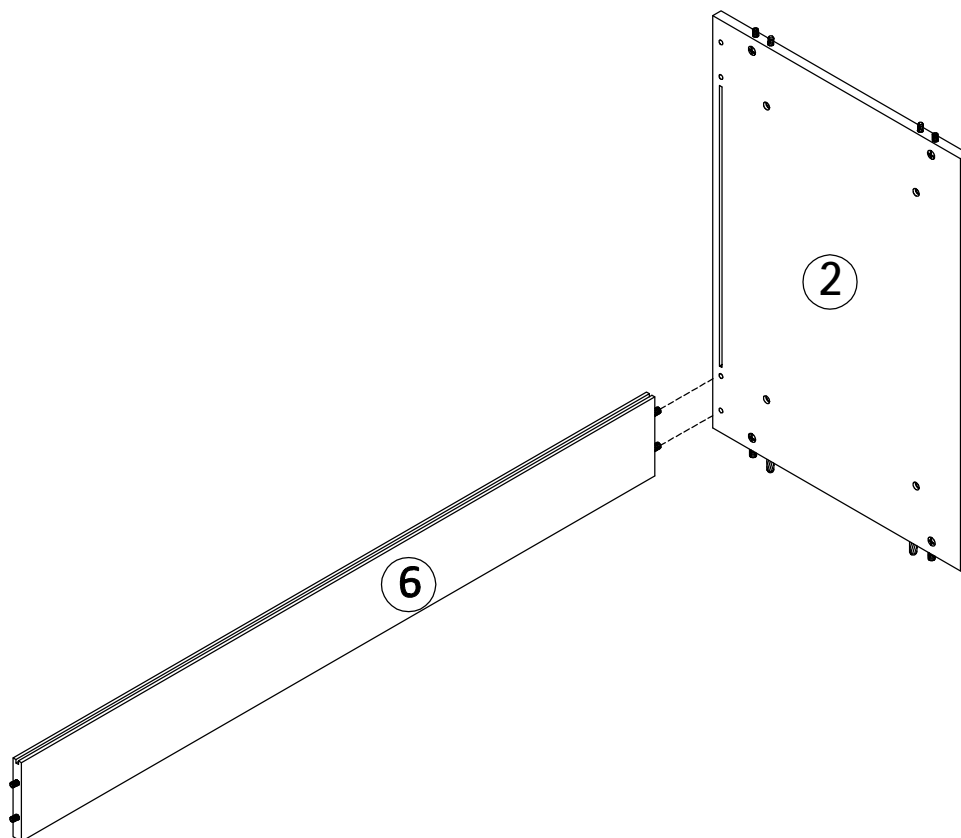


16

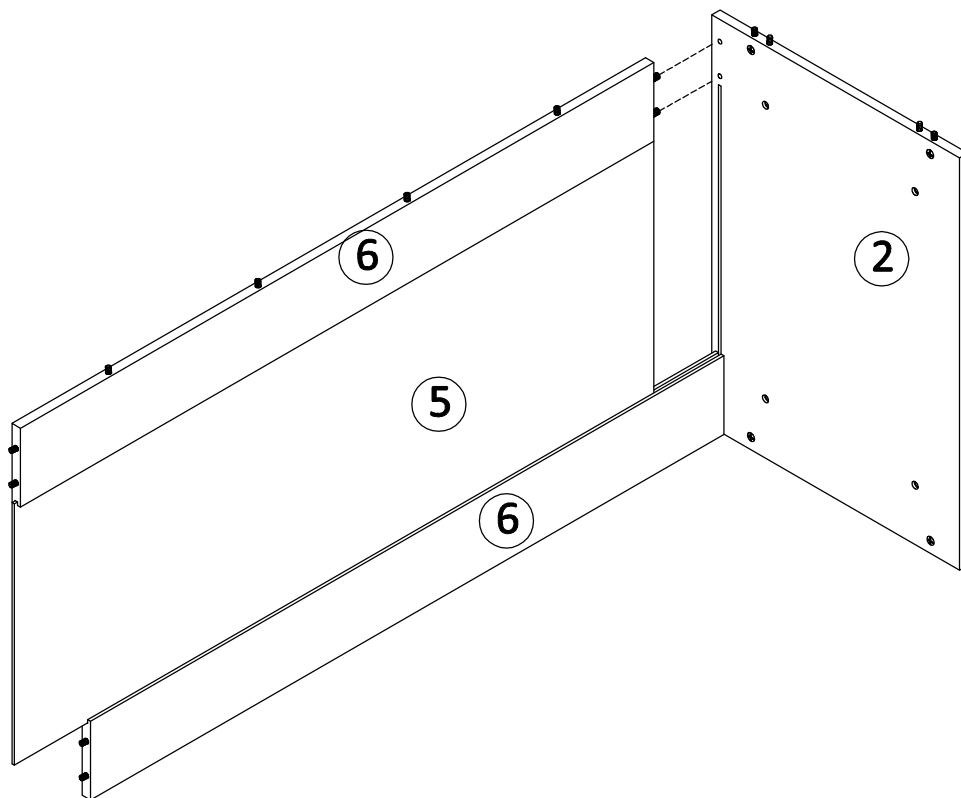


17

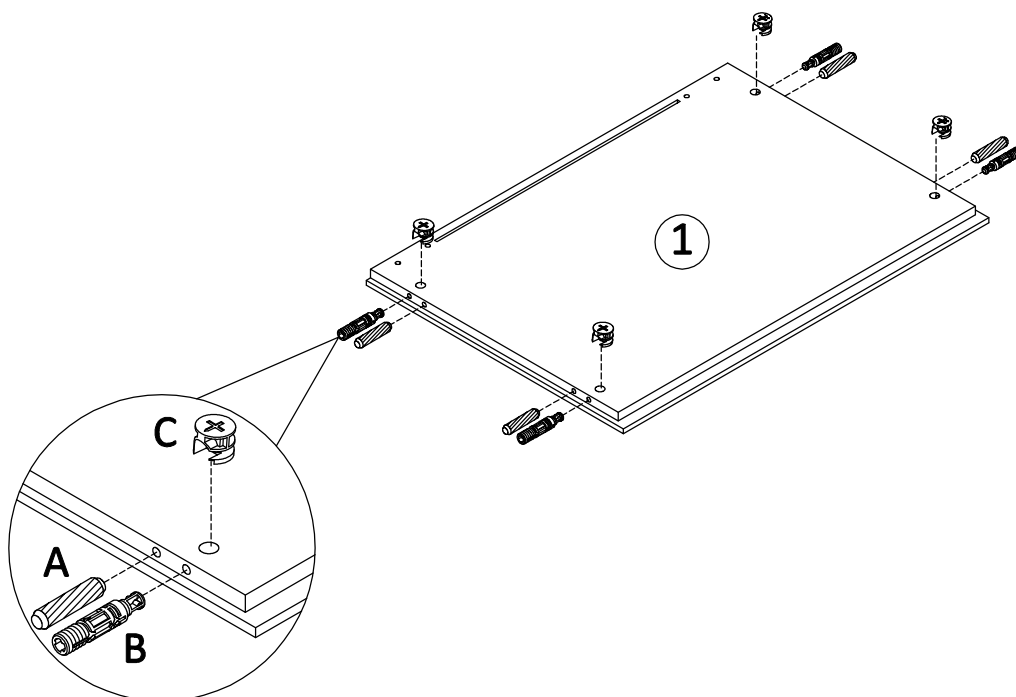


18

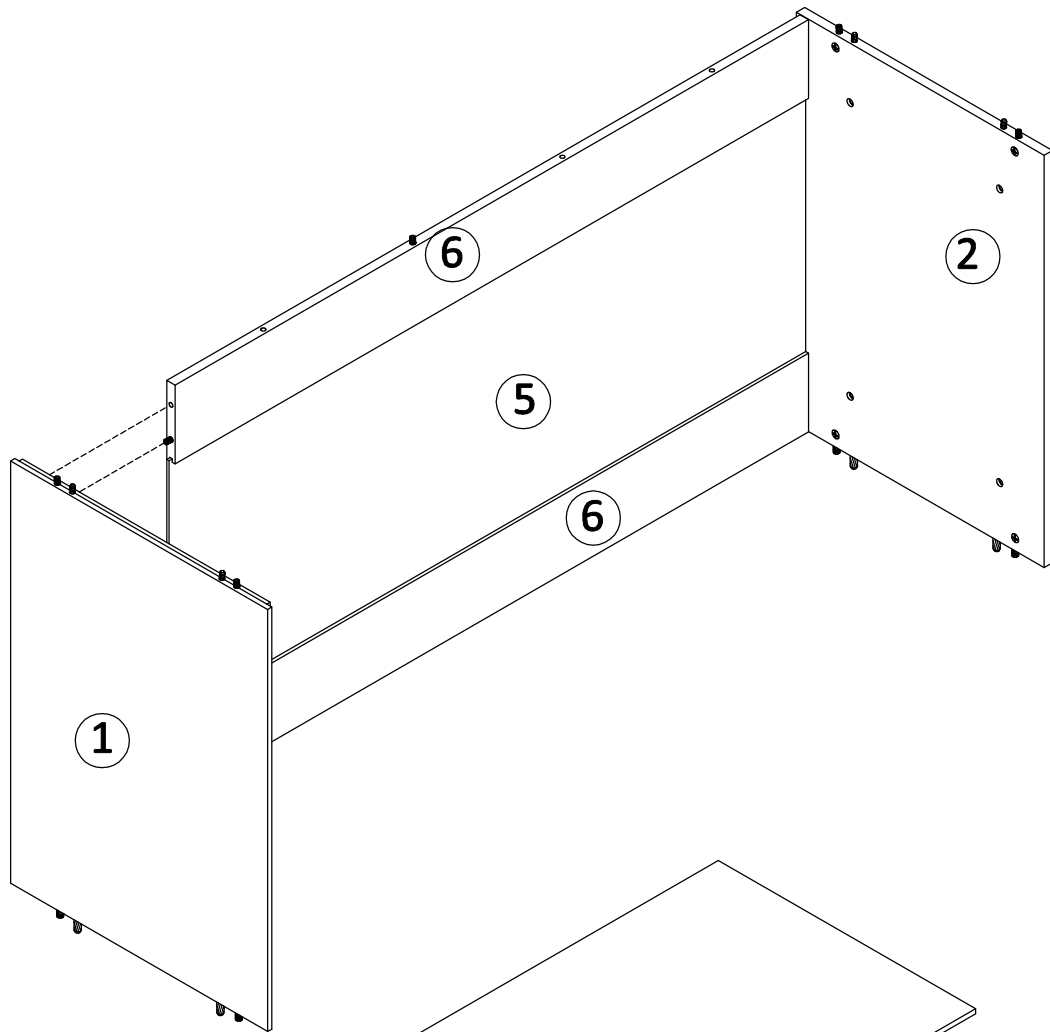


19

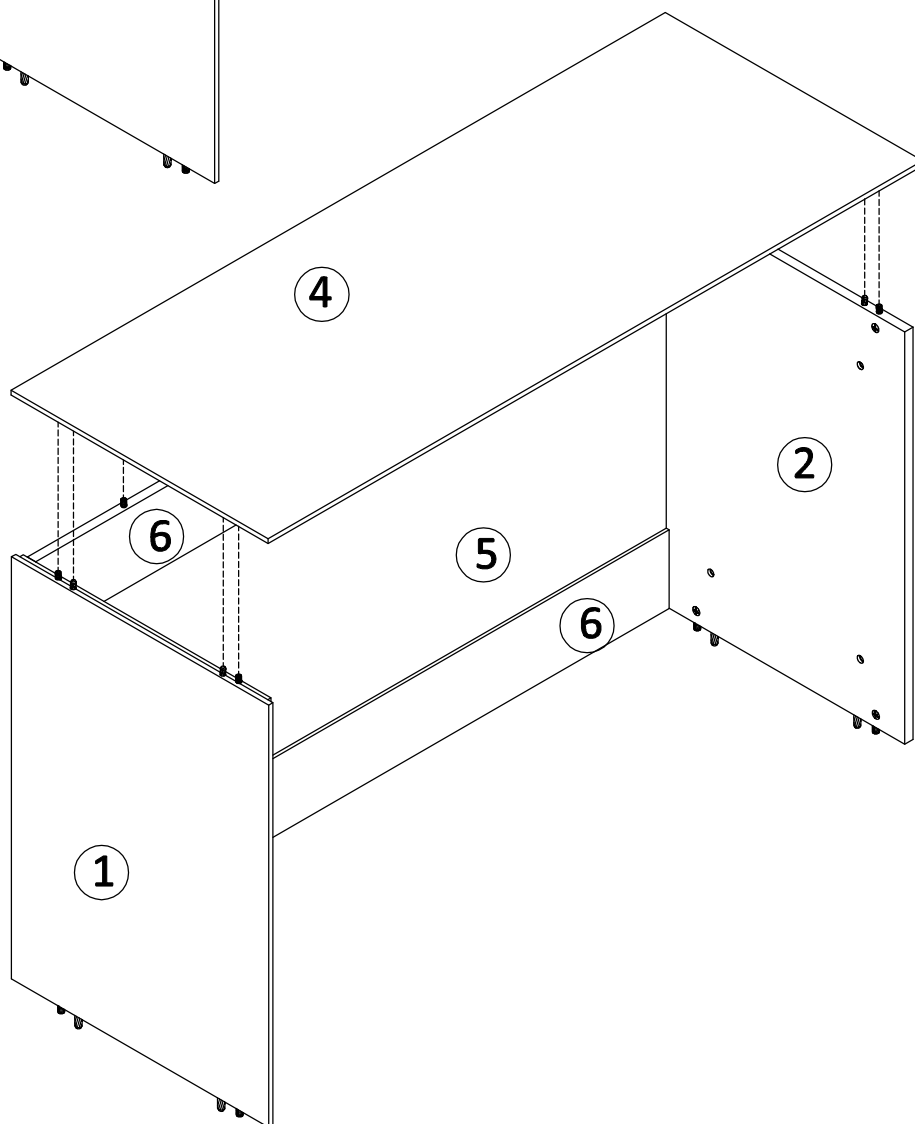


20

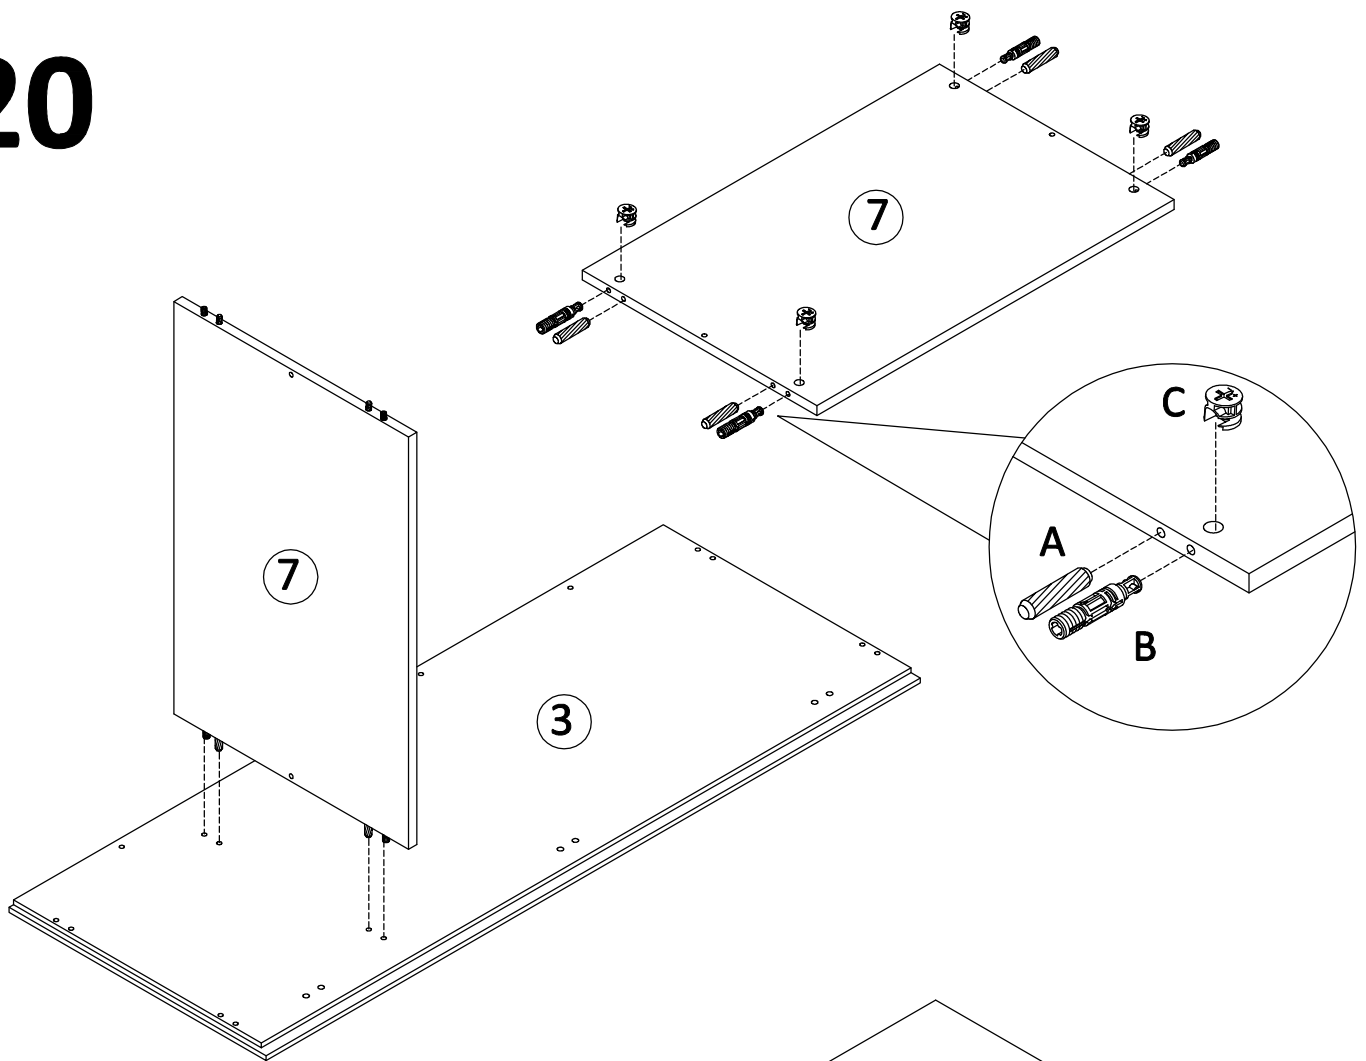


21

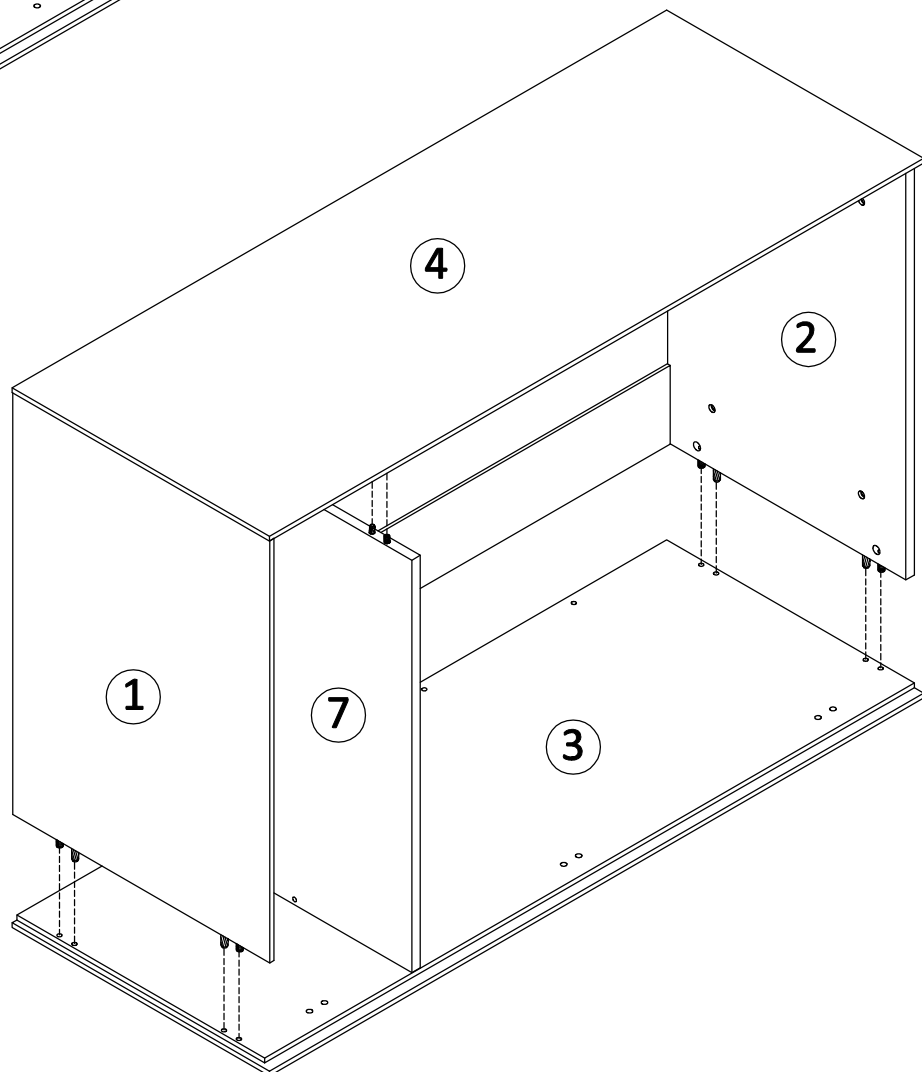

22

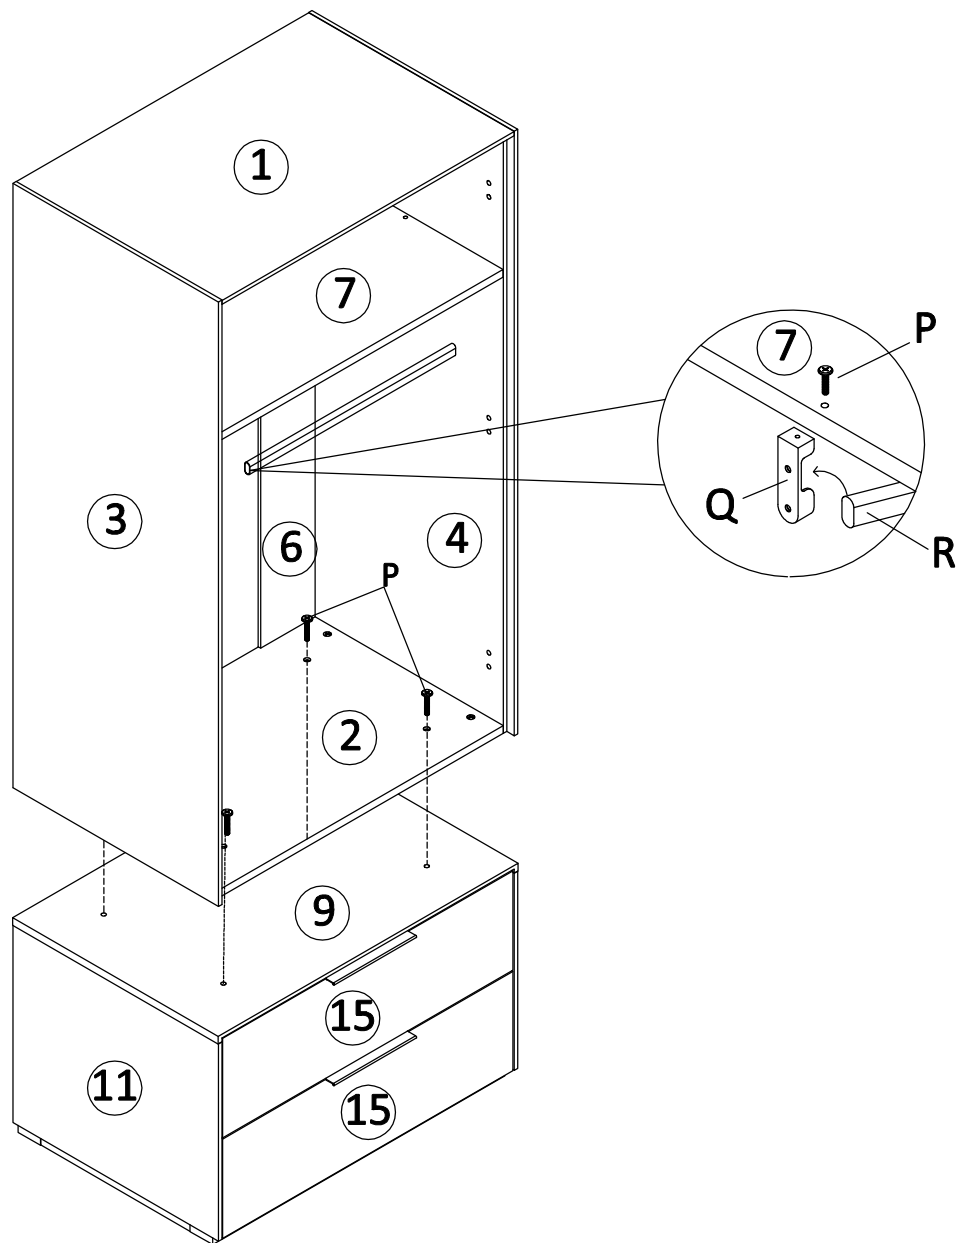


23

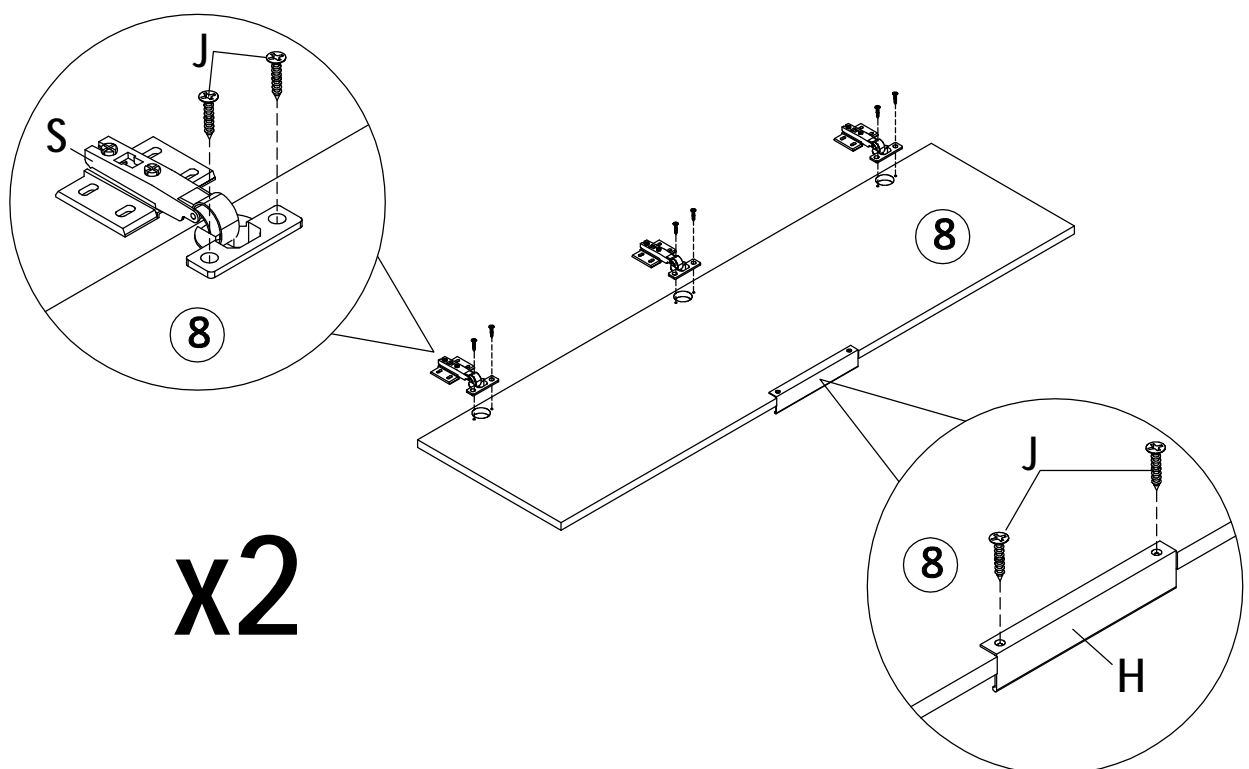


x2

24

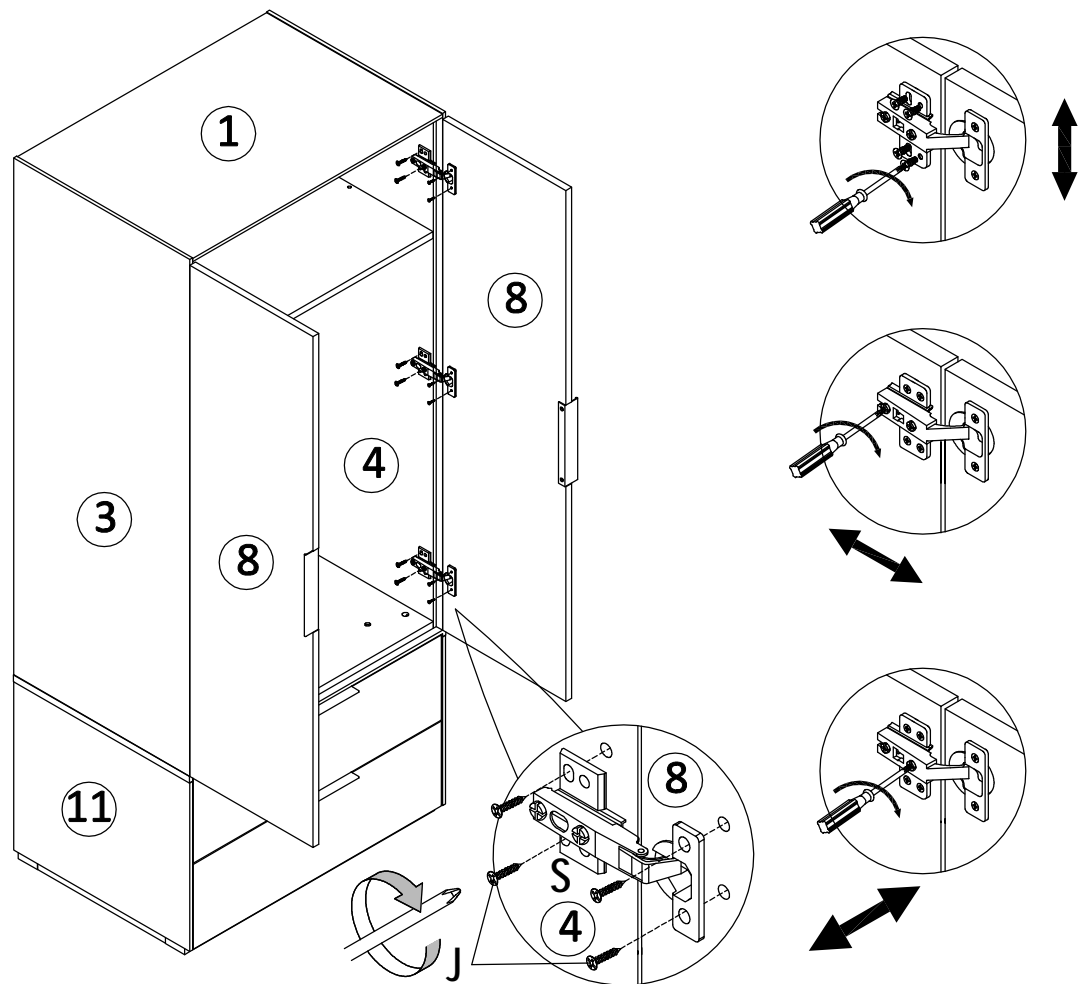


25

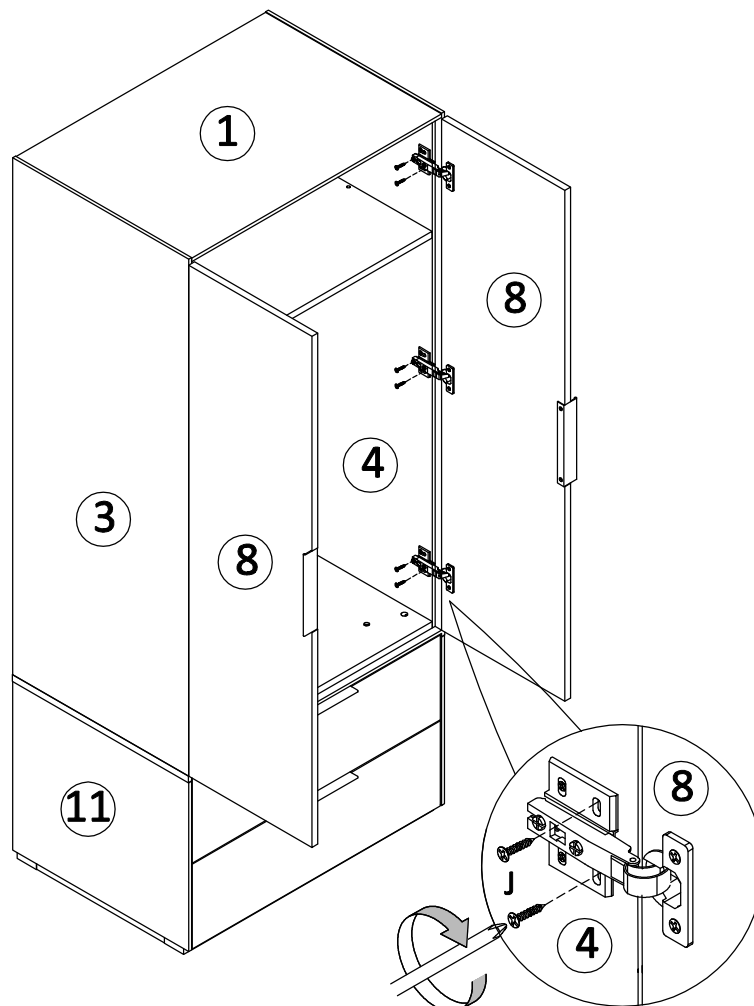

26

$XX=YY$

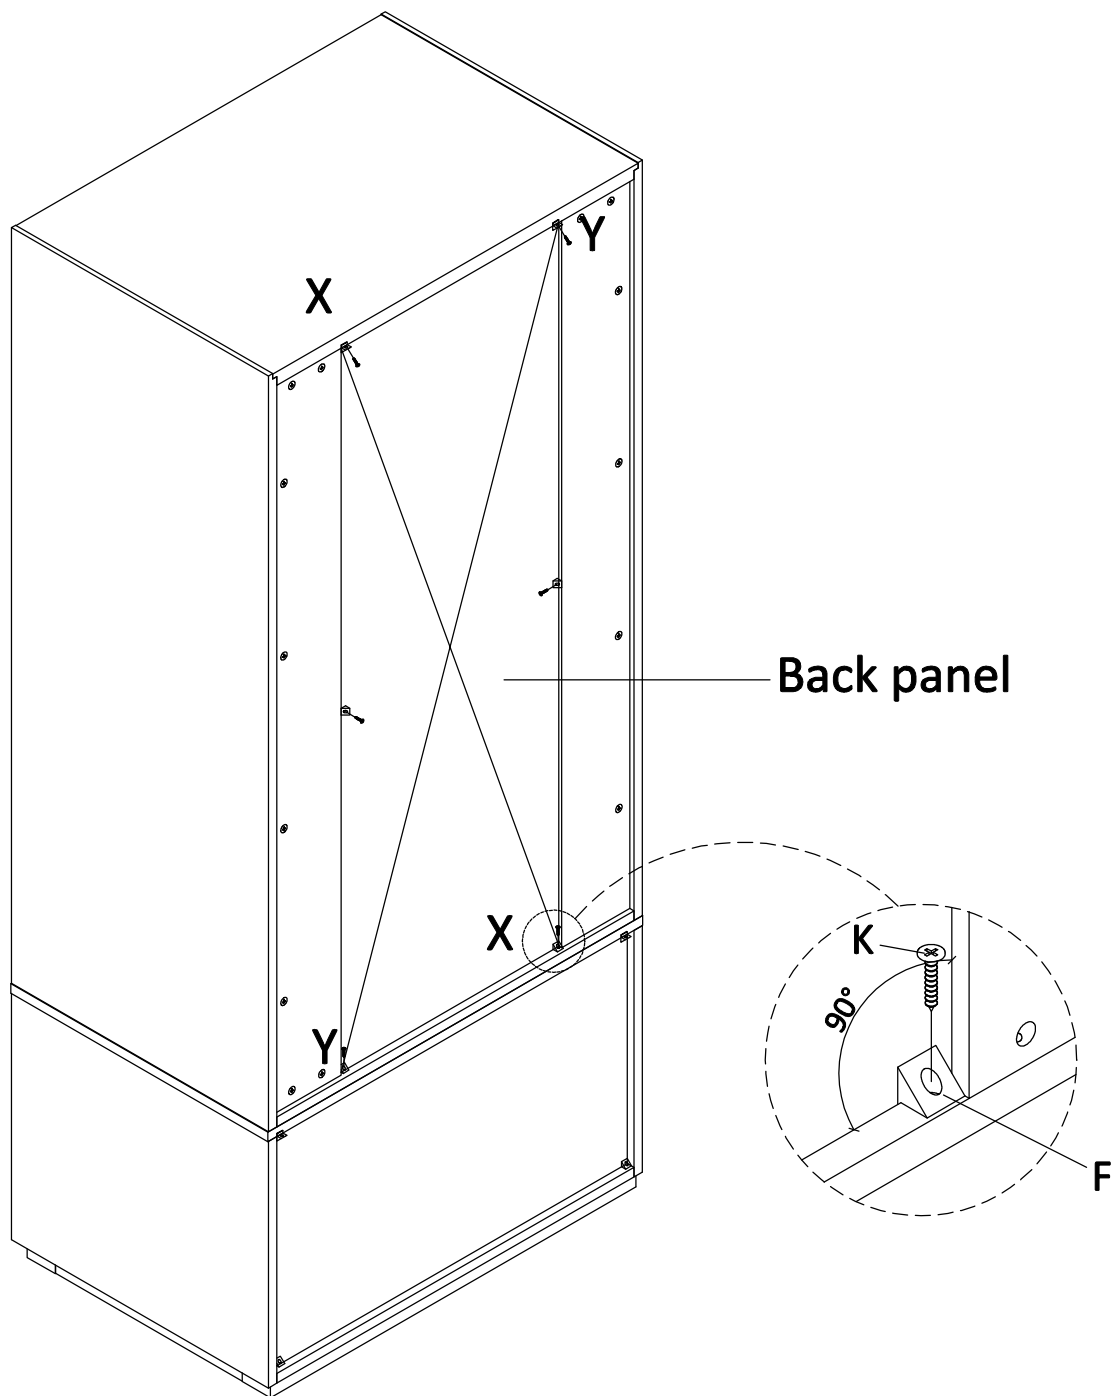


27


WARNING

THIS ITEM NEEDS TO BE FIXED TO A WALL

Please read these assembly instructions carefully as failure to adhere and non use of strap or brackets may cause the product to move and possibly lead to damage and/or injury if improperly fitted. If in doubt consult a qualified technician.

1. Place the unit into required position.
2. Ensure unit is level before securing to the wall.
3. Attach a bracket (N) to the unit back frame of the top with the short screws (K) provided.
4. Attach a bracket (N) to the wallboard with the long screws (not provided).
5. Move the unit into it's final position. Thread a strap (O) through the bracket (N) as show in the below illustration, tighten strap (O) until snug. Do not over tighten.
6. Make sure the bracket (N) is firmly attached to wallboard and unit and the strap (O) is snug.
7. Please note that the wall fixings such as wall plugs are not supplied - please secure the unit to the wall using the appropriate fixings for your wall type. These will be readily available from your DIY/Home improvement store.

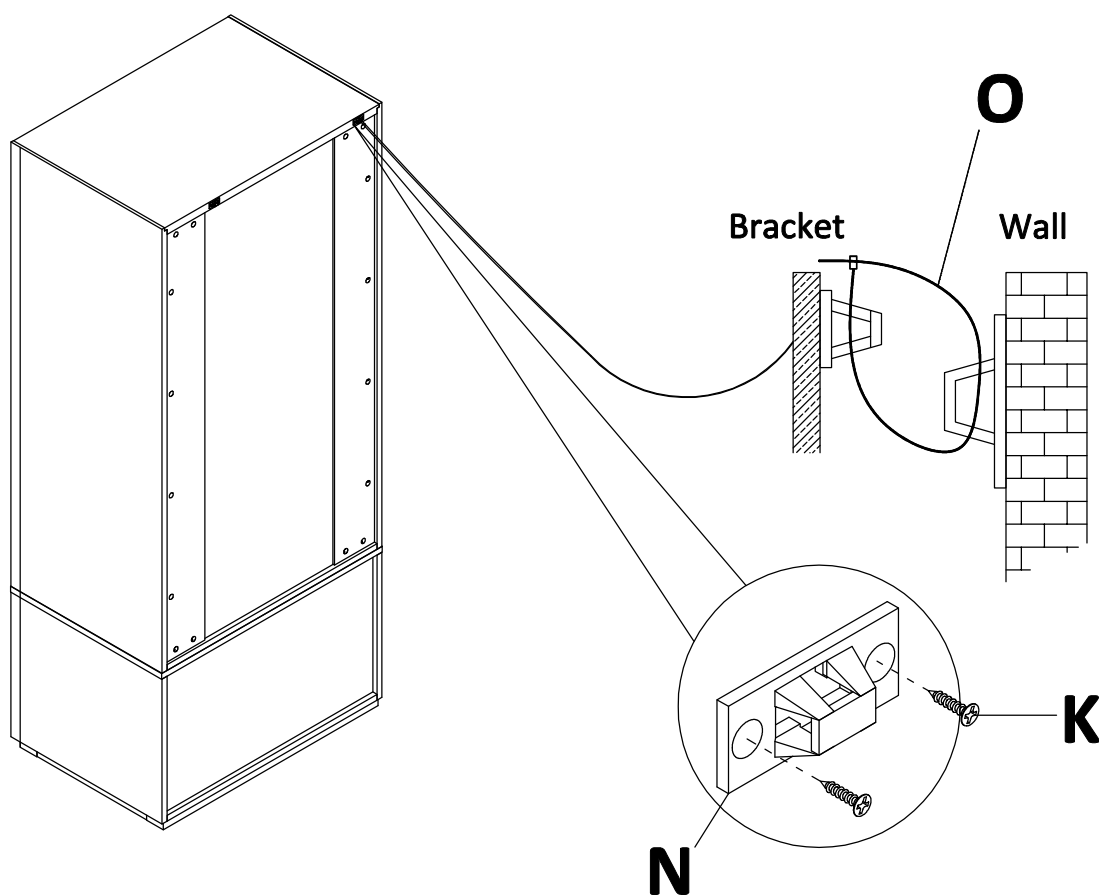

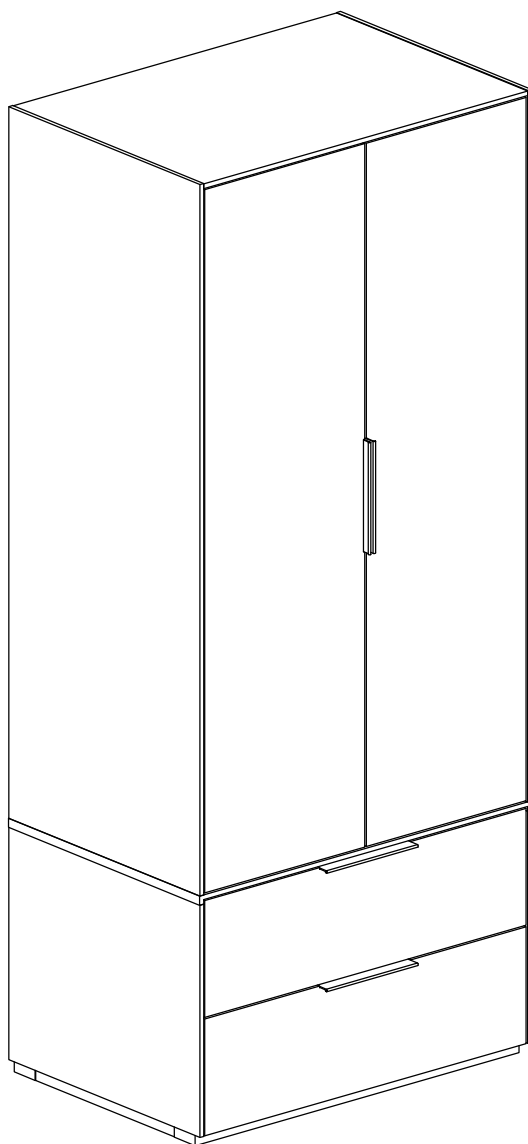

CLEANING ADVICE:

To avoid scratching the painted and glass surfaces,
clean only with a non abrasive cleaner.