


Intel TV Bracket

Assembly Instructions

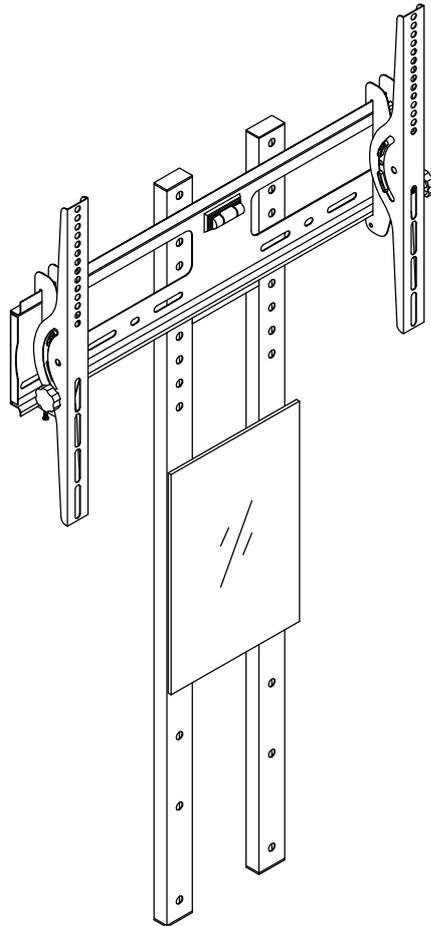

To watch assembly video :
www.frankolsenfurniture.co.uk

Download the **Frank Olsen Smart app** from :
Google Play store or Apple store




HARDWARE

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 mm




Bag A






A M8*25  x2	B M8*35  x4	C M8*55  x6	D M8  x22	E M8*13  x10	F D13  x1
--	--	--	--	---	--

Bag B

G M8*30  x1	H M6*14  x2	I M6*16  x4	J M8*16  x4	K M5*45  x2	L M8 Black  x1
M M6  x4	N M8  x4	O  x2			





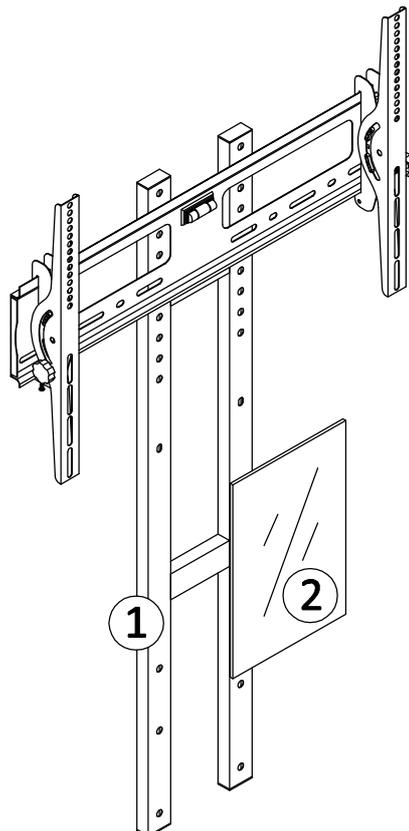


1

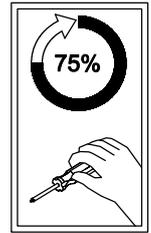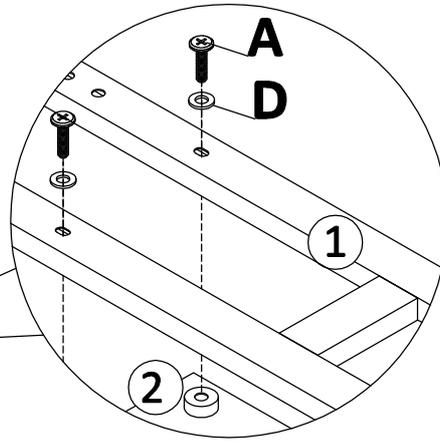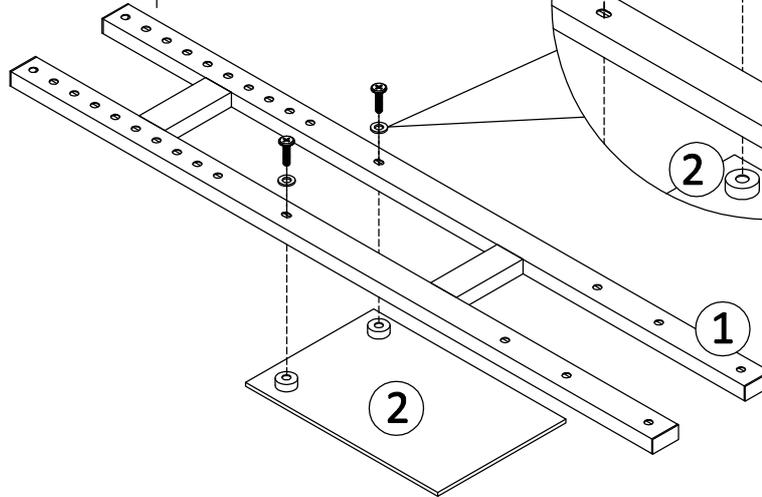

Note: Do not fully tighten until assembly is completed .


2

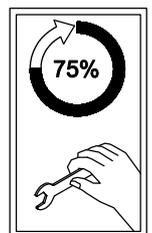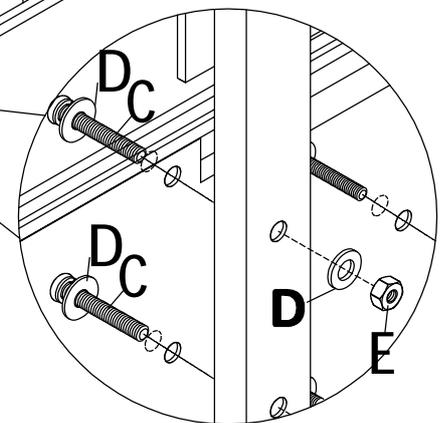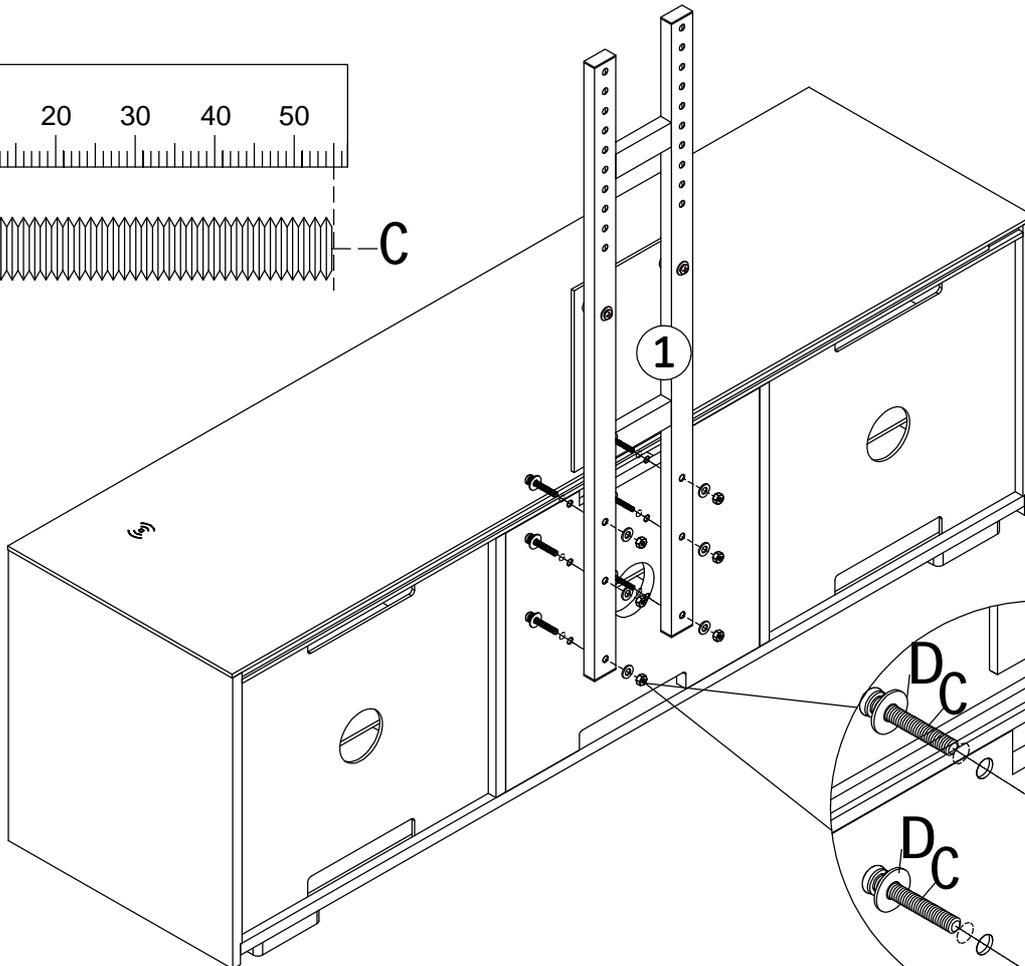

Note: Do not fully tighten until assembly is completed .

3


Keep a gap between top glass and bracket glass.

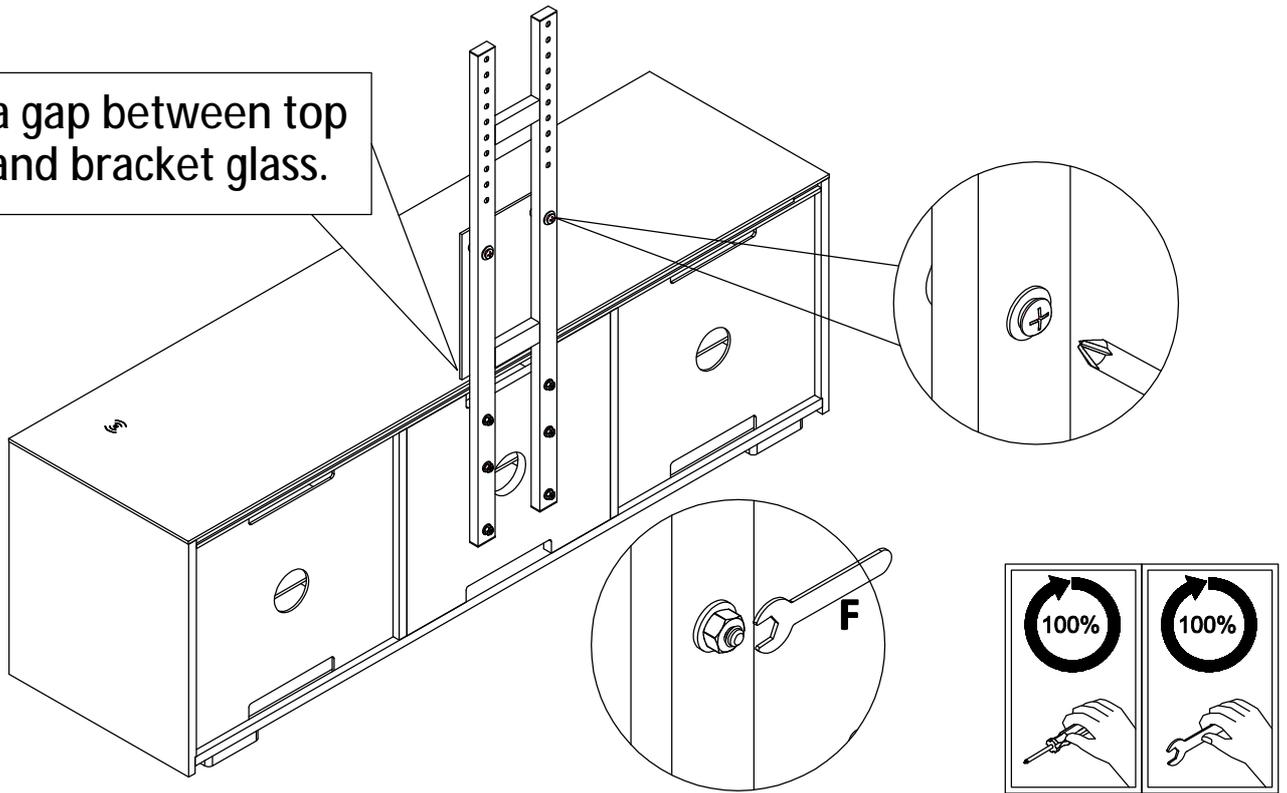


Note: Please tighten all bolts.

4

Keep the gradienter level

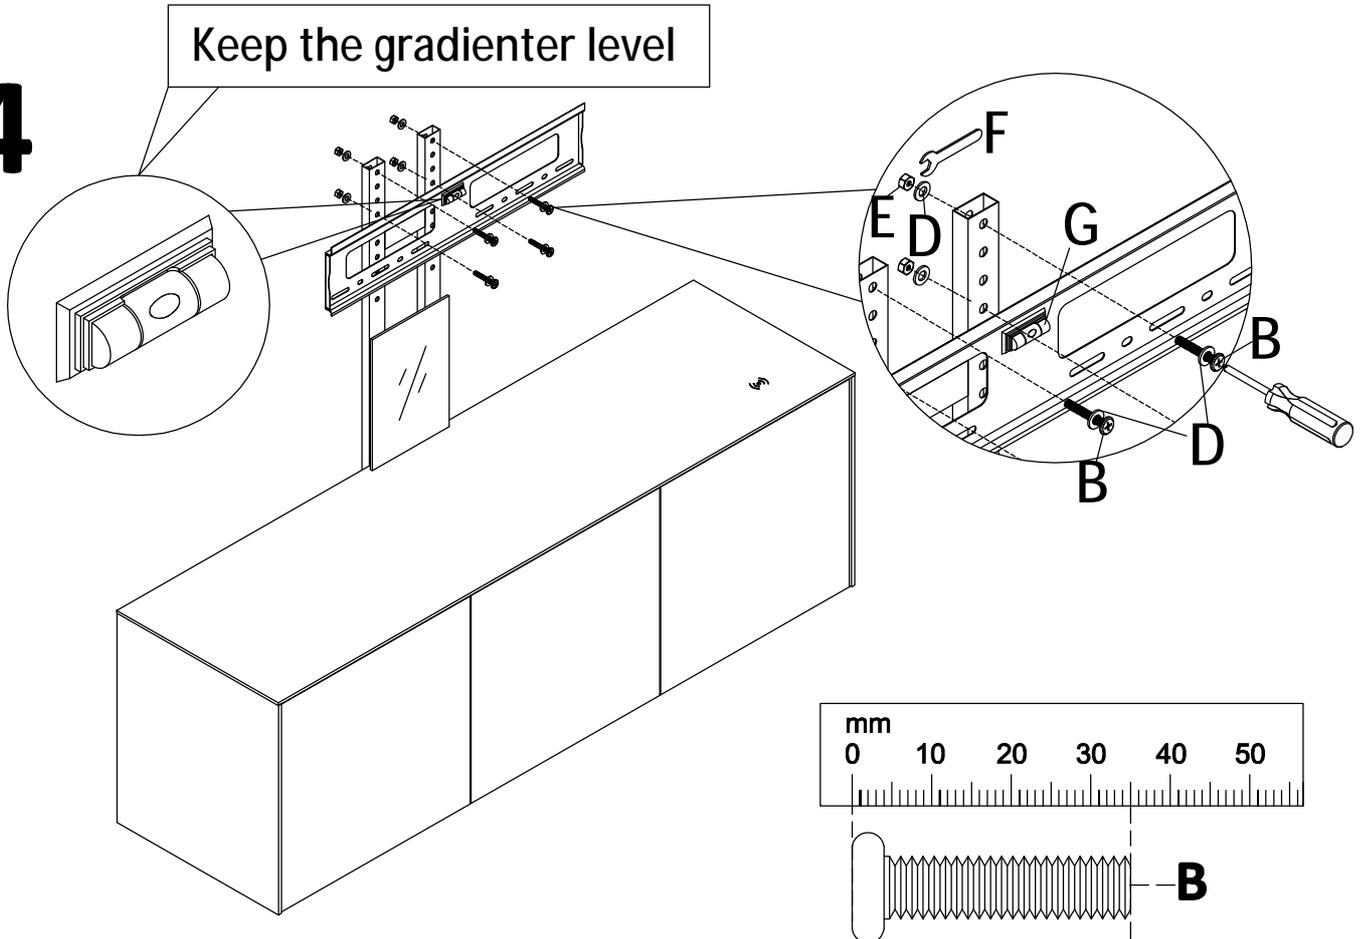


5

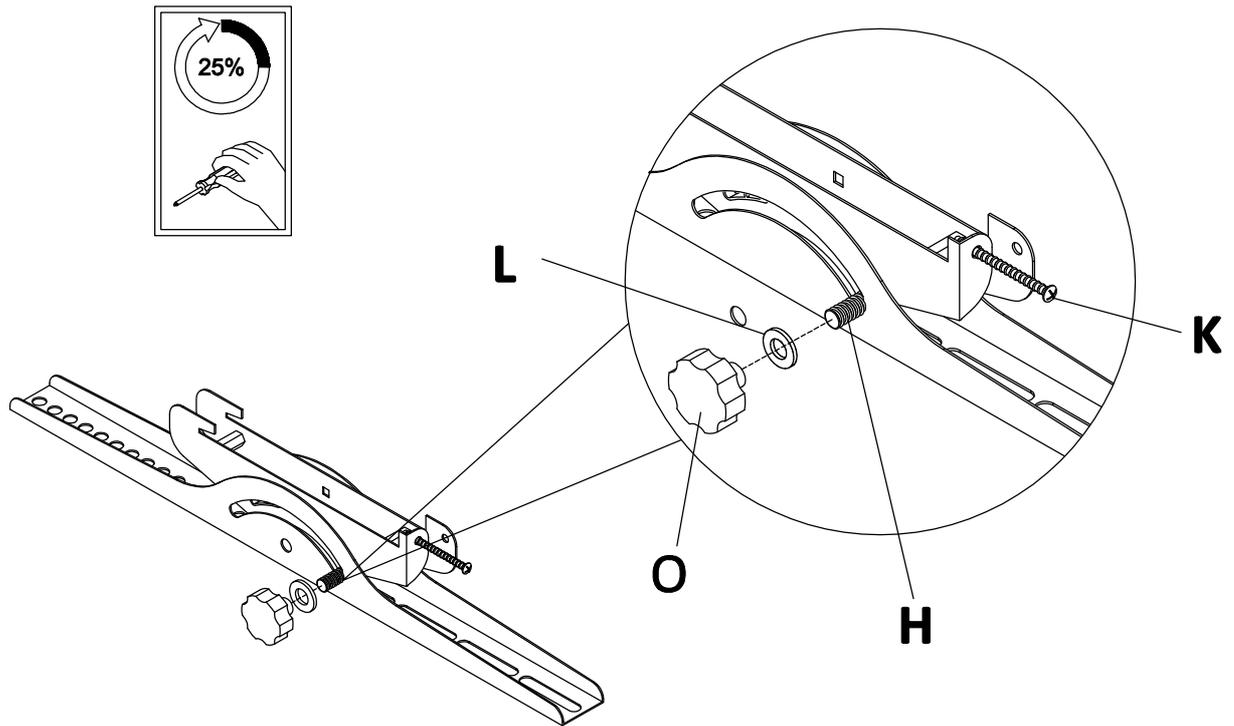

Note: Do not fully tighten until assembly is completed .


6

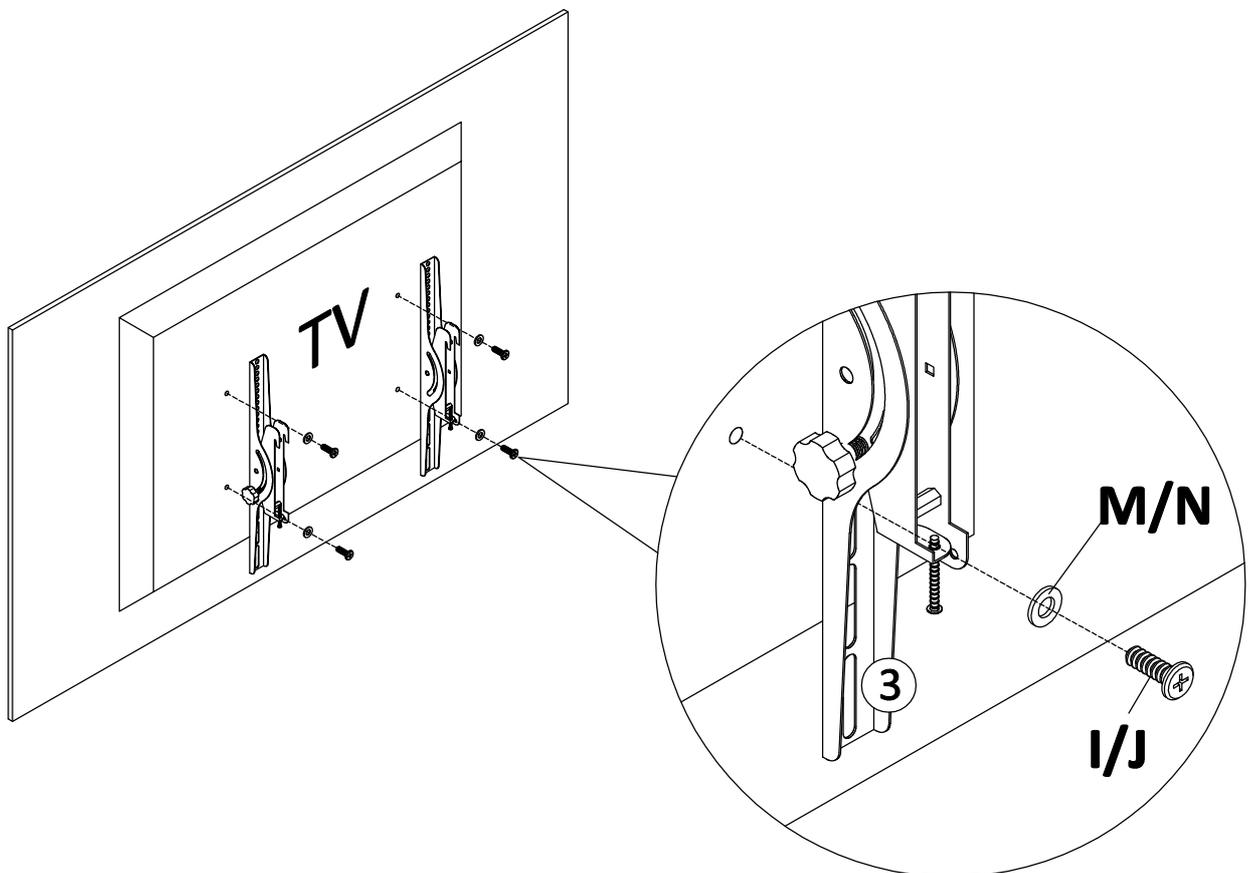

Choose the matched size of Bolt (M/N) and Spacer(I/J).

7

-15° ~ 15°

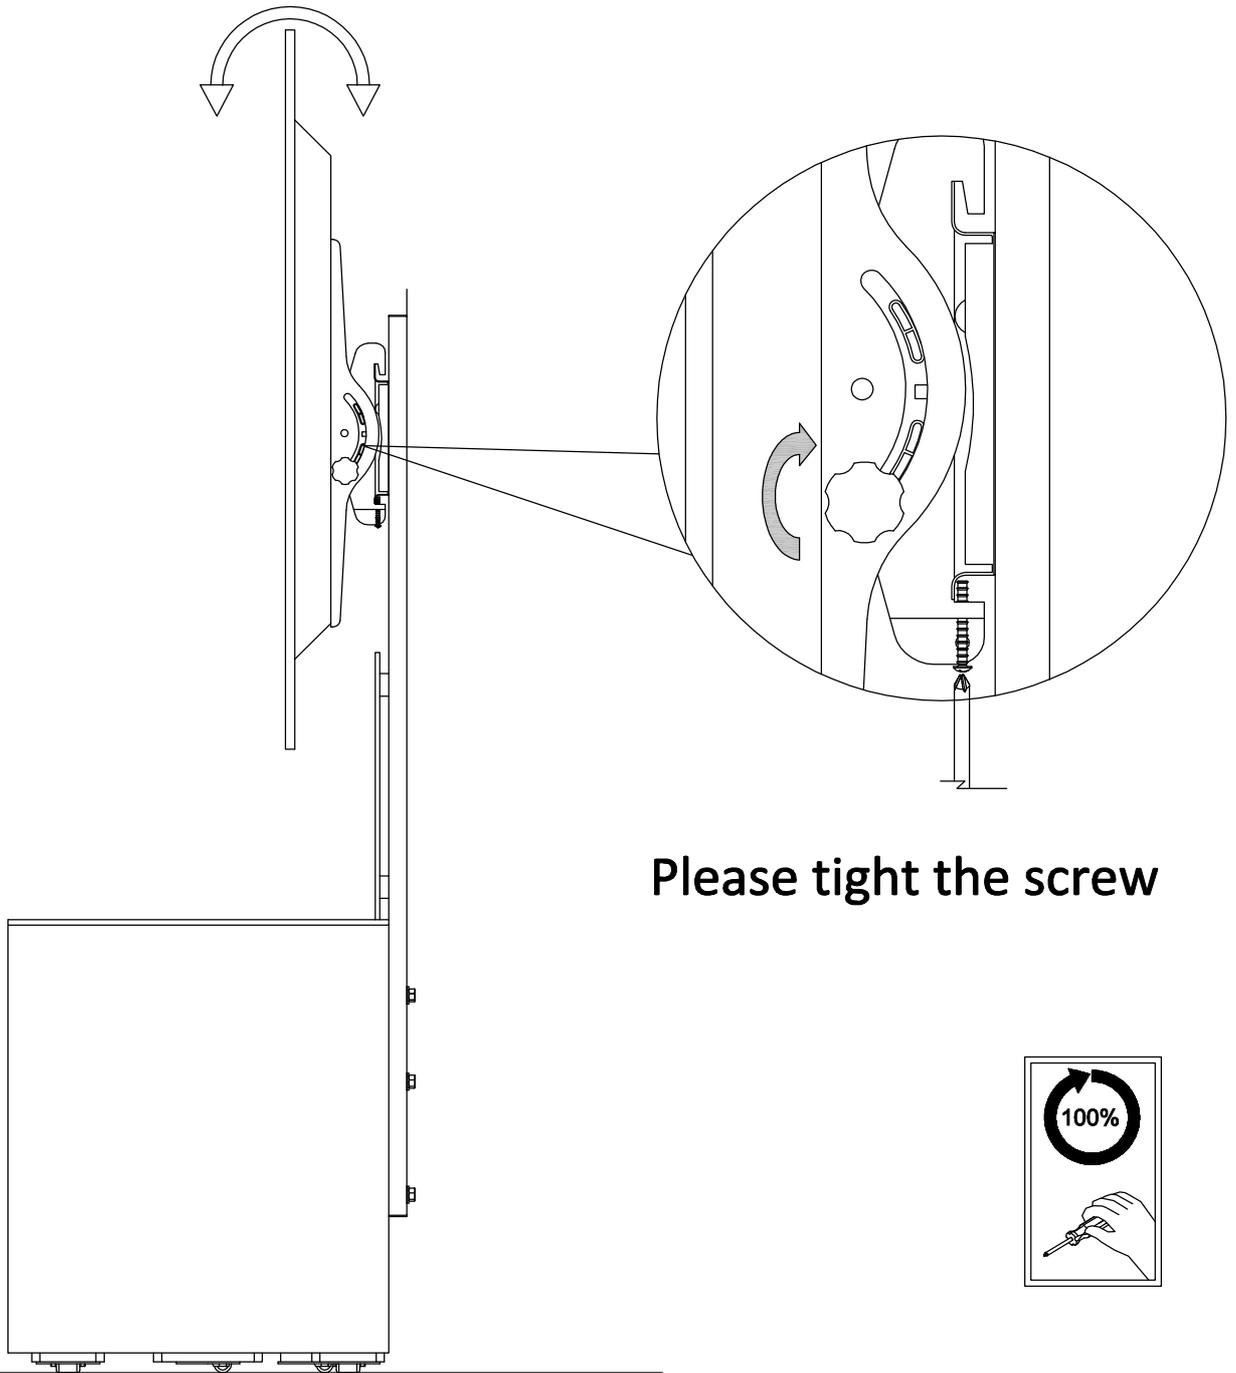

CLEANING ADVICE:

To avoid scratching the painted and glass surfaces,
clean only with a non abrasive cleaner.