


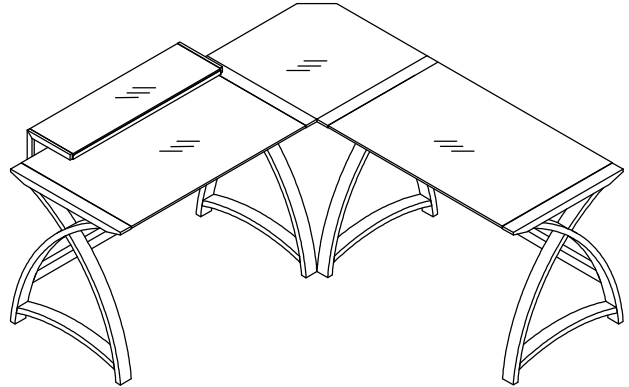



ASSEMBLY INSTRUCTION

PC 201 CC HELP LINE NUMBER 01443 816982

A		M4	1PC
B		1/4"*100mmL	4PCS
C		Top Glass	1PC
D		Metal Frame	1PC
E			
F			
G			
H			
I			
J			



STEP1

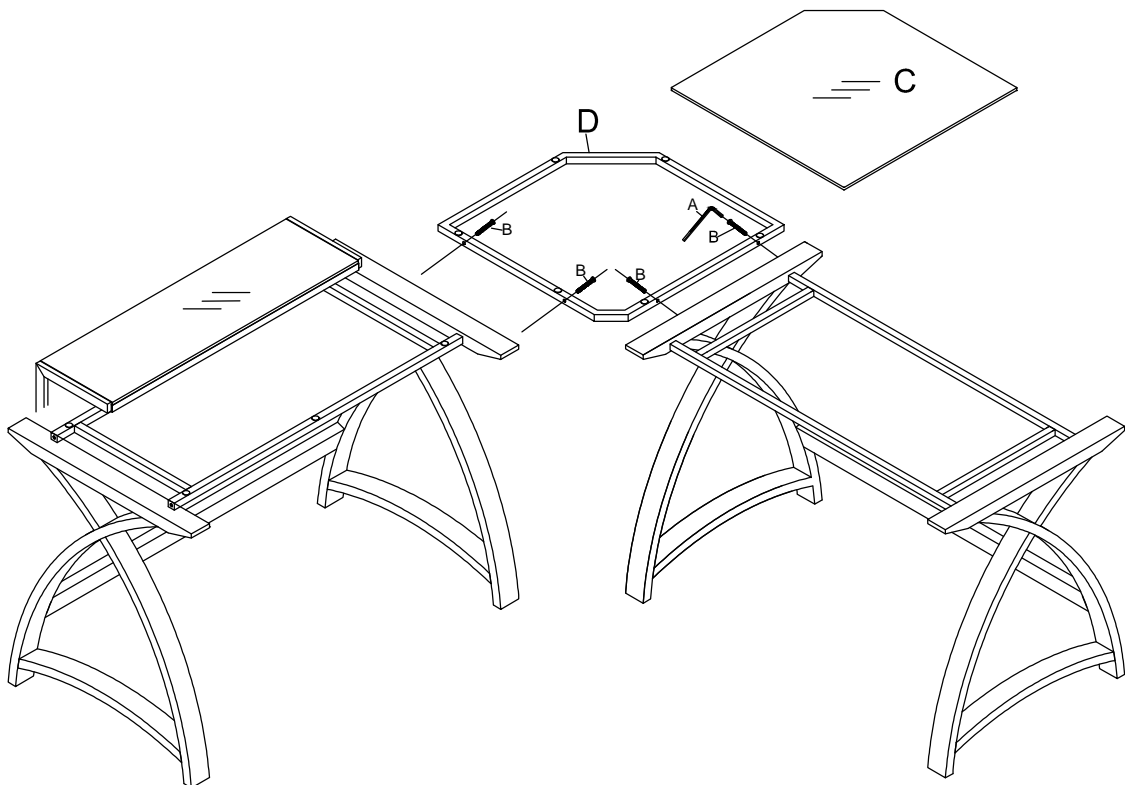

When using the PC201 CC to connect the work table to the PC Desk please follow as below:

- 1: Replace the 80mm bolts "B" from both the table and the desk and use the 100mm bolts as supplied with the PC201 CC.
- 2: These bolts fit through the metal frame "D" and screw into the metal frames of both the table and desk.
- 3: You will no longer require the 4*80mm bolts that have been replaced by the 100mm bolts.