


ASSEMBLY INSTRUCTION


PC 601 1300 3 drawer pedestal desk

HELP LINE NUMBER 01443 816982


A		M4	1PC
B		1/4"*80mm	2PCS
C		1/4"*15mm	4PCS
D		1/4"*40mm	4PCS
E		1/4"*28mm	8PCS
F		Ø16*7mm	4PCS
G		Ø16*9mm	6PCS
H		Adjustable foot	4PCS
I		Ø1/4"*Ø12mm	6PCS
J		Rear Chamfer	1PC
K		Top	1PC
L		Left Foot	1PC
M		Side Cabinet	1PC
N		Cross Bar	1PC
O		Pop up Socket	1PC

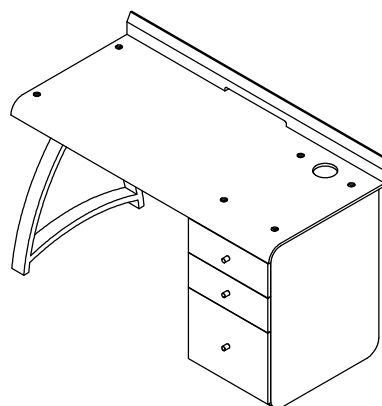


STEP1

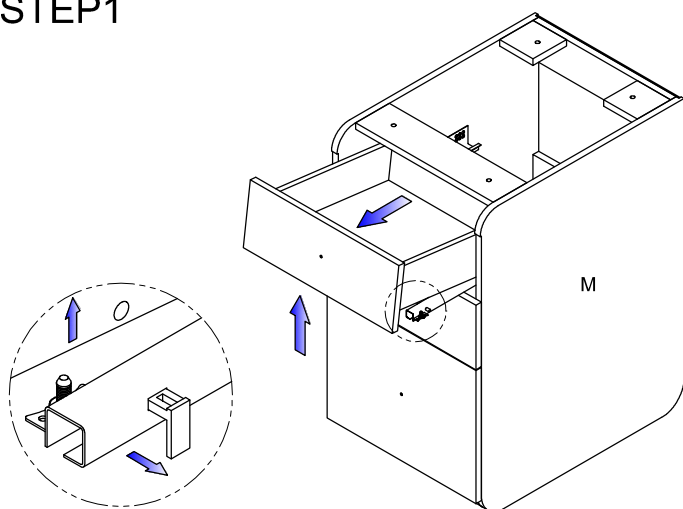


STEP2

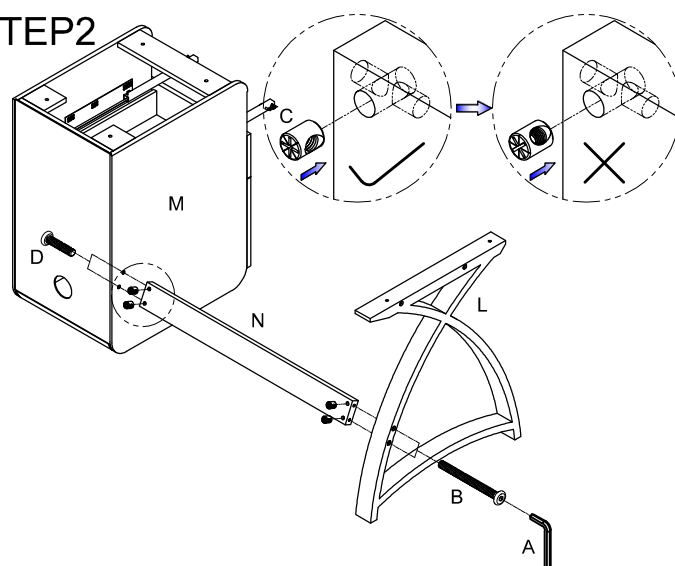


STEP3

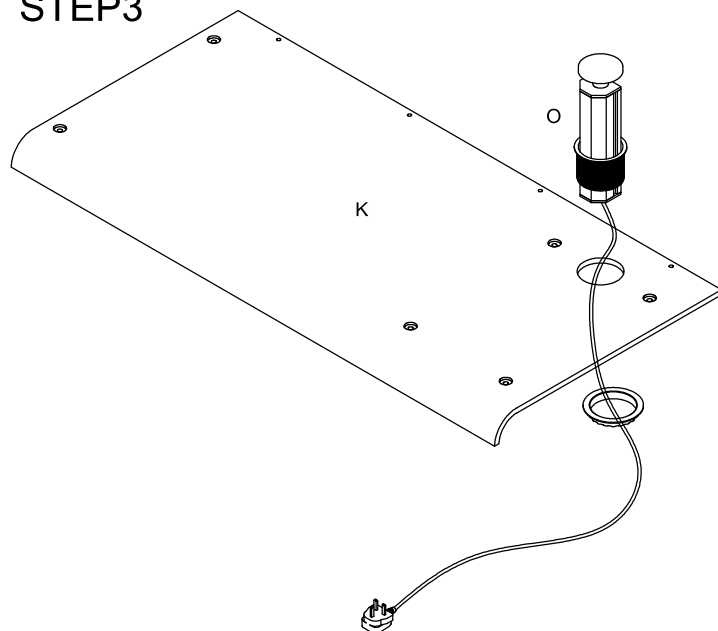


STEP4

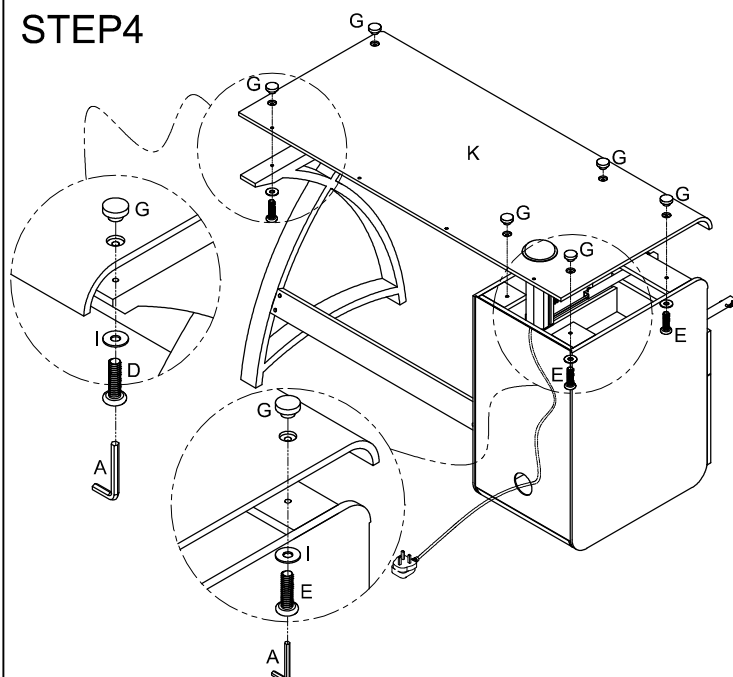


STEP5

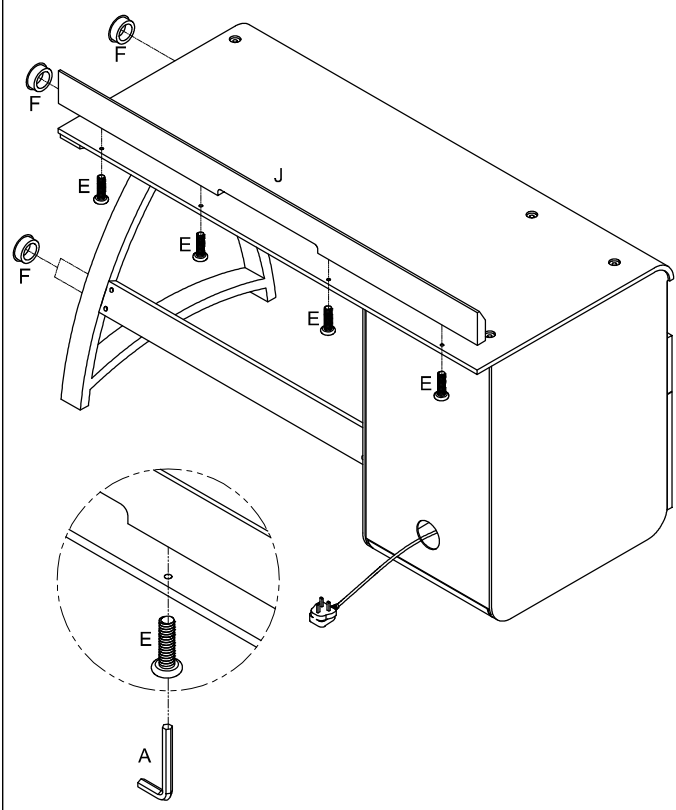

STEP6

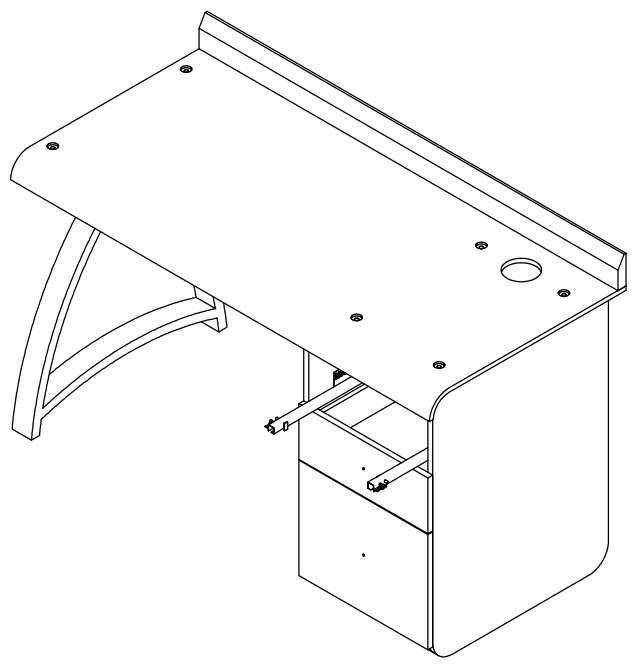

STEP7

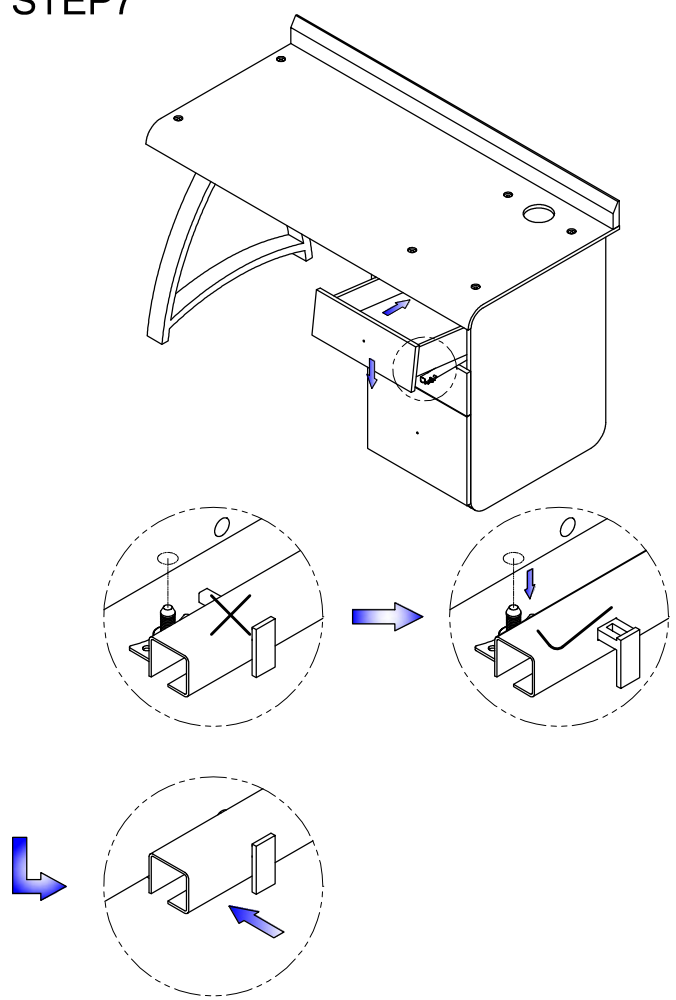

STEP8

